




Robots

KUKA Laboratories GmbH

LBR iiwa

LBR iiwa 7 R800, LBR iiwa 14 R820

Specification

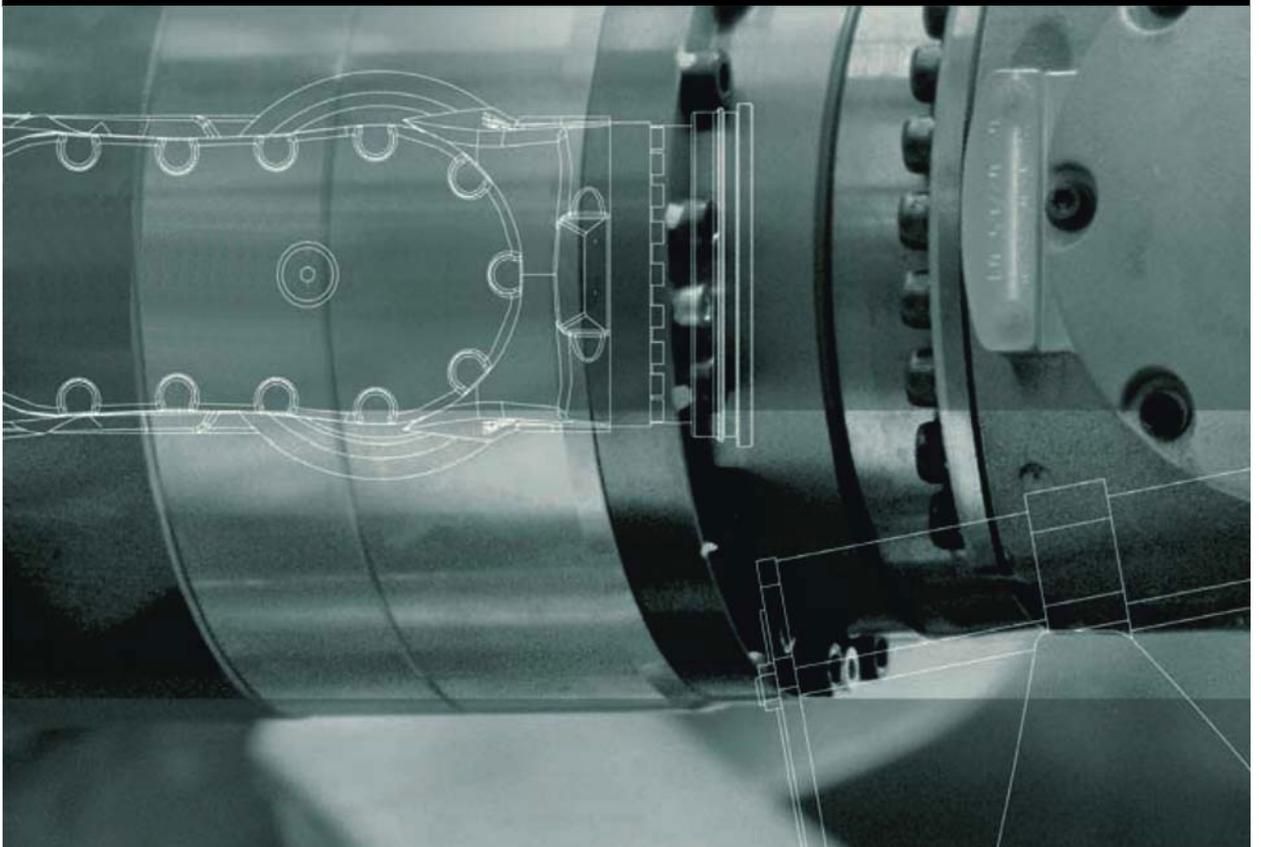

Issued: 16.10.2014

Version: Spez LBR iiwa V4



© Copyright 2014

KUKA Laboratories GmbH
Zugspitzstraße 140
D-86165 Augsburg
Germany

This documentation or excerpts thereof may not be reproduced or disclosed to third parties without the express permission of the KUKA Laboratories GmbH.

Other functions not described in this documentation may be operable in the controller. The user has no claims to these functions, however, in the case of a replacement or service work.

We have checked the content of this documentation for conformity with the hardware and software described. Nevertheless, discrepancies cannot be precluded, for which reason we are not able to guarantee total conformity. The information in this documentation is checked on a regular basis, however, and necessary corrections will be incorporated in the subsequent edition.

Subject to technical alterations without an effect on the function.

Translation of the original documentation

KIM-PS5-DOC

Publication:	Pub Spez LBR iiwa en
Book structure:	Spez LBR iiwa V3.1
Version:	Spez LBR iiwa V4

Contents

1	Introduction	5
1.1	Industrial robot documentation	5
1.2	Representation of warnings and notes	5
1.3	Terms used	5
2	Purpose	7
2.1	Target group	7
2.2	Intended use	7
3	Product description	9
3.1	Overview of the robot system	9
3.2	Description of the LBR iiwa	10
4	Technical data	13
4.1	Technical data, overview	13
4.2	Technical data, LBR iiwa 7 R800	13
4.2.1	Basic data, LBR iiwa 7 R800	13
4.2.2	Axis data, LBR iiwa 7 R800	14
4.2.3	Payloads, LBR iiwa 7 R800	15
4.2.4	Foundation data, LBR iiwa 7 R800	17
4.3	Technical data, LBR iiwa 14 R820	17
4.3.1	Basic data, LBR iiwa 14 R820	17
4.3.2	Axis data, LBR iiwa 14 R820	18
4.3.3	Payloads, LBR iiwa 14 R820	19
4.3.4	Foundation data, LBR iiwa 14 R820	21
4.4	Plates and labels	21
4.5	Stopping distances and times	22
4.5.1	General information	22
4.5.2	Terms used	23
4.5.3	Stopping distances and stopping times for LBR iiwa 7 R800	24
4.5.3.1	Stopping distances and stopping times for STOP 0, axis 1 to axis 4	24
4.5.3.2	Stopping distances and stopping times for STOP 1, axis 1	25
4.5.3.3	Stopping distances and stopping times for STOP 1, axis 2	27
4.5.3.4	Stopping distances and stopping times for STOP 1, axis 3	29
4.5.3.5	Stopping distances and stopping times for STOP 1, axis 4	31
4.5.4	Stopping distances and stopping times for LBR iiwa 14 R820	33
4.5.4.1	Stopping distances and stopping times for STOP 0, axis 1 to axis 4	33
4.5.4.2	Stopping distances and stopping times for STOP 1, axis 1	34
4.5.4.3	Stopping distances and stopping times for STOP 1, axis 2	36
4.5.4.4	Stopping distances and stopping times for STOP 1, axis 3	38
4.5.4.5	Stopping distances and stopping times for STOP 1, axis 4	40
5	Safety	43
5.1	Legal framework	43
5.1.1	Liability	43
5.1.2	Intended use of the industrial robot	43
5.1.3	EC declaration of conformity and declaration of incorporation	44
5.2	Safety functions	44

5.2.1	Terms used	45
5.2.2	Personnel	46
5.2.3	Workspace, safety zone and danger zone	47
5.2.4	Safety-oriented functions	48
5.2.4.1	EMERGENCY STOP device	49
5.2.4.2	Enabling device	49
5.2.4.3	Operator safety	50
5.2.4.4	External EMERGENCY STOP device	50
5.2.4.5	External safety stop 1 (path-maintaining)	50
5.2.4.6	External enabling device	50
5.2.4.7	External safe operational stop	51
5.2.5	Triggers for safety-oriented stop reactions	51
5.2.6	Non-safety-oriented functions	52
5.2.6.1	Mode selection	52
5.2.6.2	Software limit switches	52
5.3	Additional protective equipment	53
5.3.1	Jog mode	53
5.3.2	Labeling on the industrial robot	53
5.3.3	External safeguards	53
5.4	Safety measures	54
5.4.1	General safety measures	54
5.4.2	Transportation	55
5.4.3	Start-up and recommissioning	55
5.4.4	Manual mode	56
5.4.5	Automatic mode	57
5.4.6	Maintenance and repair	57
5.4.7	Decommissioning, storage and disposal	58
5.4.8	Safety measures for "single point of control"	58
5.5	Applied norms and regulations	59
6	Planning	61
6.1	Mounting variant	61
6.1.1	Machine frame mounting with centering	61
6.2	Connecting cables and interfaces	62
7	Transportation	65
7.1	Transportation	65
7.1.1	Transportation with transport packaging	65
7.1.2	Transportation with transport box (optional)	66
8	KUKA Service	67
8.1	Requesting support	67
8.2	KUKA Customer Support	67
	Index	75

1 Introduction

1.1 Industrial robot documentation

The industrial robot documentation consists of the following parts:

- Documentation for the manipulator
- Documentation for the robot controller
- Operating and programming instructions for the System Software
- Instructions for options and accessories
- Parts catalog on storage medium

Each of these sets of instructions is a separate document.

1.2 Representation of warnings and notes

Safety

These warnings are relevant to safety and **must** be observed.

 DANGER	These warnings mean that it is certain or highly probable that death or severe injuries will occur, if no precautions are taken.
-------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------

 WARNING	These warnings mean that death or severe injuries may occur, if no precautions are taken.
--------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------

 CAUTION	These warnings mean that minor injuries may occur, if no precautions are taken.
----------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------

NOTICE	These warnings mean that damage to property may occur, if no precautions are taken.
---------------	--------------------------------------------------------------------------------------------

	These warnings contain references to safety-relevant information or general safety measures. These warnings do not refer to individual hazards or individual precautionary measures.
-------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

This warning draws attention to procedures which serve to prevent or remedy emergencies or malfunctions:

SAFETY INSTRUCTIONS	Procedures marked with this warning must be followed exactly.
----------------------------	----------------------------------------------------------------------

Notices

These notices serve to make your work easier or contain references to further information.

	Tip to make your work easier or reference to further information.
-------------------------------------------------------------------------------------	-------------------------------------------------------------------

1.3 Terms used

Term	Description
LBR iiwa	Lightweight robot intelligent industrial work assistant

Term	Description
Manipulator	The robot arm and the associated electrical installations
KCP smartPAD	<p>The KCP (KUKA Control Panel) teach pendant has all the operator control and display functions required for operating and programming the industrial robot.</p> <p>The KCP variant for the KUKA Sunrise Cabinet is called KUKA smartPAD. The general term "KCP", however, is generally used in this documentation.</p>

2 Purpose

2.1 Target group

This documentation is aimed at users with the following knowledge and skills:

- Advanced knowledge of mechanical engineering
- Advanced knowledge of electrical and electronic systems
- Knowledge of the robot controller system



For optimal use of our products, we recommend that our customers take part in a course of training at KUKA College. Information about the training program can be found at www.kuka.com or can be obtained directly from our subsidiaries.

2.2 Intended use

Use The industrial robot is intended for handling tools and fixtures, or for processing or transferring components or products. Use is only permitted under the specified environmental conditions.

Misuse Any use or application deviating from the intended use is deemed to be impermissible misuse; examples of such misuse include:

- Transportation of persons and animals
- Use as a climbing aid
- Operation outside the permissible operating parameters
- Use in potentially explosive environments
- Outdoor operation
- Leaning on the robot arm
- Underground operation

NOTICE

Changing the structure of the manipulator, e.g. by drilling holes, etc., can result in damage to the components. This is considered improper use and leads to loss of guarantee and liability entitlements.

3 Product description

3.1 Overview of the robot system

A robot system (>>> Fig. 3-1) comprises all the assemblies of an industrial robot, including the manipulator (mechanical system and electrical installations), controller, connecting cables, end effector (tool) and other equipment.

The industrial robot consists of the following components:

- Manipulator
- KUKA Sunrise Cabinet robot controller
- KUKA smartPAD control panel
- Connecting cables
- Software
- Options, accessories



Fig. 3-1: Overview of robot system

- 1 Connecting cable to the smartPAD
- 2 KUKA smartPAD control panel
- 3 Manipulator
- 4 Connecting cable to KUKA Sunrise Cabinet robot controller
- 5 KUKA Sunrise Cabinet robot controller

3.2 Description of the LBR iiwa

Overview

The LBR iiwa is classified as a lightweight robot and is a jointed-arm robot with 7 axes. All motor units and current-carrying cables are protected beneath cover plates.

Each axis is protected by means of axis range sensors and can be adjusted by means of internal sensors.

Each joint is equipped with a position sensor on the input side, torque sensors on the output side and temperature sensors. The robot can thus be operated with position and impedance control. The temperature sensors prevent thermal overloading of the robot.

The robot is equipped redundantly and consists of the following principal components:

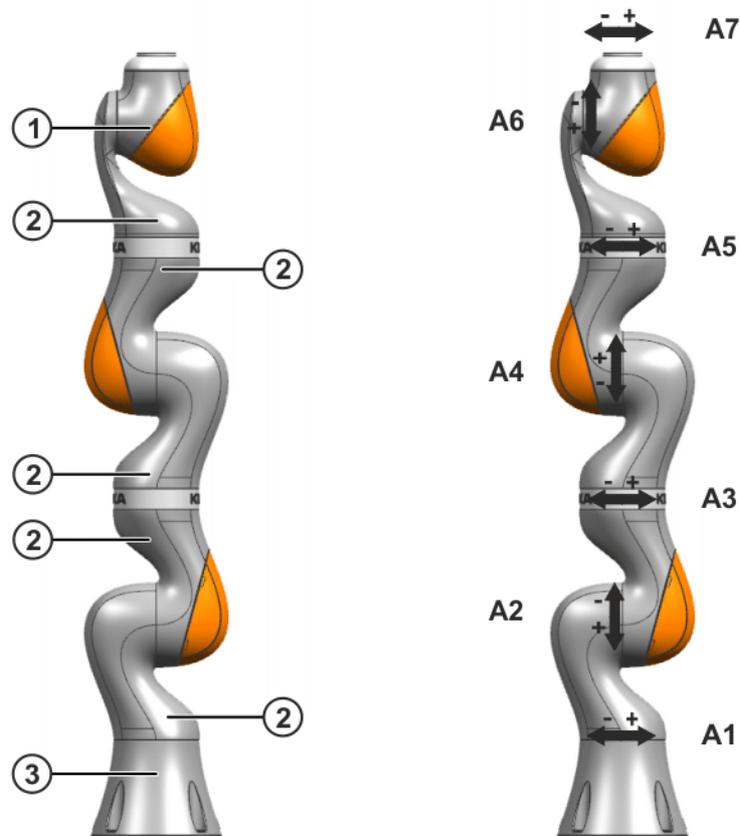


Fig. 3-2: Main assemblies and robot axes

- 1 In-line wrist
- 2 Joint module
- 3 Base frame

In-line wrist

The robot is fitted with a 2-axis in-line wrist. The motors are located in axes A6 and A7.

Joint module

The joint modules consist of an aluminum structure. The drive units are situated inside these modules. In this way, the drive units are linked to one another via the aluminum structures.

Base frame

The base frame is the base of the robot. Interface A1 is located at the rear of the base frame. It constitutes the interface for the connecting cables between the robot, the controller and the energy supply system.

Electrical installations

The electrical installations include all the supply and control cables for the motors of axes A1 (J1) to A7 (J7). All the connections on the motors are plug-and-socket connections. The entire cabling is routed internally in the robot.

The connecting cable is connected to the robot controller. The energy supply system cables are connected to the periphery.

4 Technical data

4.1 Technical data, overview

The technical data for the individual robot types can be found in the following sections:

Robot	Technical data
LBR iiwa 7 R800	<ul style="list-style-type: none"> ■ Basic data (>>> 4.2.1 "Basic data, LBR iiwa 7 R800" Page 13) ■ Axis data (>>> 4.2.2 "Axis data, LBR iiwa 7 R800" Page 14) ■ Payloads (>>> 4.2.3 "Payloads, LBR iiwa 7 R800" Page 15) ■ Foundation data (>>> 4.2.4 "Foundation data, LBR iiwa 7 R800" Page 17) ■ Plates and labels (>>> 4.4 "Plates and labels" Page 21) ■ Stopping distances and times (>>> 4.5.3 "Stopping distances and stopping times for LBR iiwa 7 R800" Page 24)
LBR iiwa 14 R820	<ul style="list-style-type: none"> ■ Basic data (>>> 4.3.1 "Basic data, LBR iiwa 14 R820" Page 17) ■ Axis data (>>> 4.3.2 "Axis data, LBR iiwa 14 R820" Page 18) ■ Payloads (>>> 4.3.3 "Payloads, LBR iiwa 14 R820" Page 19) ■ Foundation data (>>> 4.3.4 "Foundation data, LBR iiwa 14 R820" Page 21) ■ Plates and labels (>>> 4.4 "Plates and labels" Page 21) ■ Stopping distances and times (>>> 4.5.4 "Stopping distances and stopping times for LBR iiwa 14 R820" Page 33)

4.2 Technical data, LBR iiwa 7 R800

4.2.1 Basic data, LBR iiwa 7 R800

Basic data

	LBR iiwa 7 R800
Number of axes	7
Number of controlled axes	7
Volume of working envelope	1.7 m ³
Pose repeatability (ISO 9283)	± 0.1 mm
Weight	approx. 23.9 kg
Rated payload	7 kg
Maximum reach	800 mm
Protection rating	IP 54
Protection rating, in-line wrist	IP 54

	LBR iiwa 7 R800
Sound level	< 75 dB (A)
Mounting position	Floor
Footprint	-
Permissible angle of inclination	-
Default color	-
Controller	KUKA Sunrise Cabinet
Transformation name	-

Ambient conditions

Ambient temperature during operation	5 °C to 45 °C (278 K to 318 K)
Ambient temperature during storage/transportation	0 °C to 45 °C (273 K to 318 K)
Air humidity	20 % to 80 %

4.2.2 Axis data, LBR iiwa 7 R800

Axis data

Range of motion	
A1	±170 °
A2	±120 °
A3	±170 °
A4	±120 °
A5	±170 °
A6	±120 °
A7	±175 °
Speed with rated payload	
A1	98 °/s
A2	98 °/s
A3	100 °/s
A4	130 °/s
A5	140 °/s
A6	180 °/s
A7	180 °/s

Working envelope

The diagram (>>> Fig. 4-1) shows the shape and size of the working envelope for the robot:

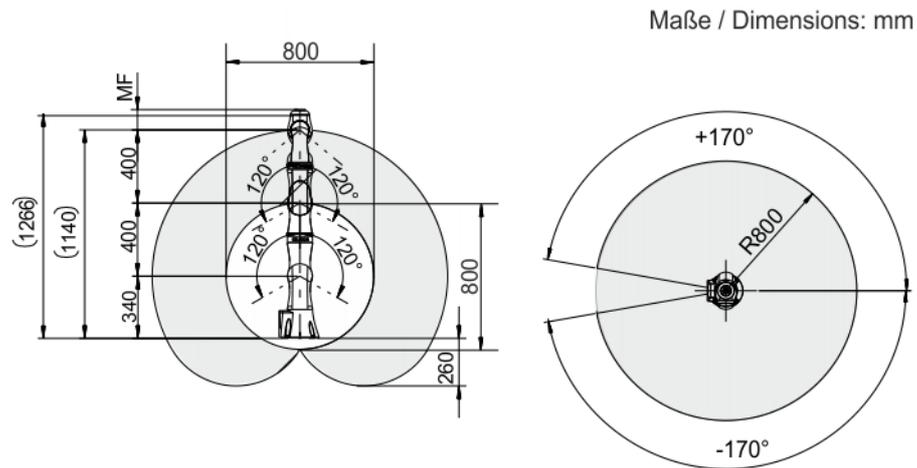


Fig. 4-1: Working envelope, LBR iiwa 7 R800



The height of the LBR iiwa depends on the media flange mounted on it. The dimensions of the media flange can be found in the Media Flange documentation.

4.2.3 Payloads, LBR iiwa 7 R800

Payloads

Rated payload	7 kg
Rated mass moment of inertia	0.3 kgm ²
Rated total load	7 kg
Rated supplementary load, base frame	0 kg
Maximum supplementary load, base frame	-
Rated supplementary load, rotating column	0 kg
Maximum supplementary load, rotating column	-
Rated supplementary load, link arm	0 kg
Maximum supplementary load, link arm	-
Rated supplementary load, arm	0 kg
Maximum supplementary load, arm	-
Nominal distance to load center of gravity	
L _{xy}	35 mm
L _z	60 mm

Load center of gravity P

For all payloads, the load center of gravity refers to the distance from the face of the mounting flange on axis A7.

Payload diagram

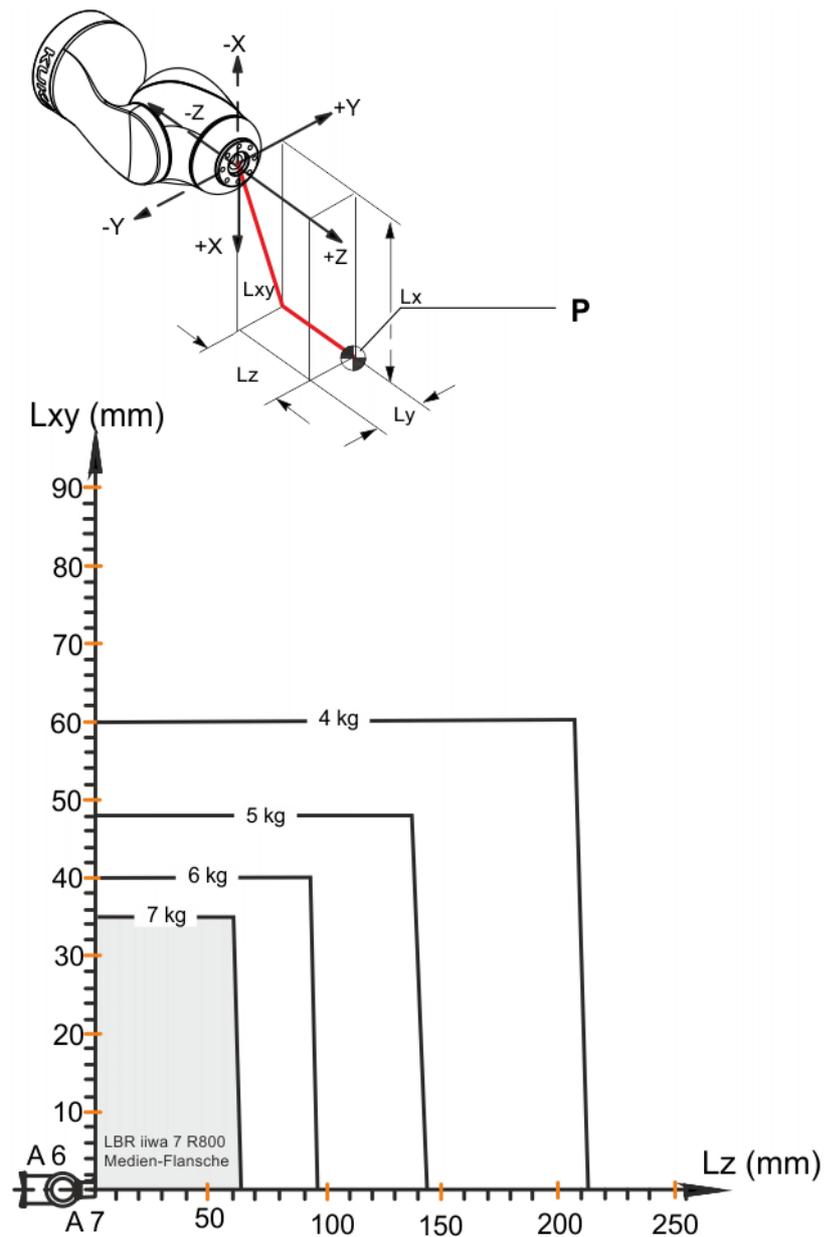


Fig. 4-2: Payload diagram, LBR iiwa 7 R800

i The payloads depend on the type of media flange used. Further information about the payloads dependent on the media flange can be found in the **Media Flange** documentation.

NOTICE This loading curve corresponds to the maximum load capacity. Both values (payload and mass moment of inertia) must be checked in all cases. Exceeding this capacity will reduce the service life of the robot and overload the motors and the gears; in any such case KUKA Customer Support must be consulted beforehand. The values determined here are necessary for planning the robot application. For commissioning the robot, additional input data are required in accordance with the operating and programming instructions of the control software.

Supplementary load

The robot cannot carry a supplementary load.

4.2.4 Foundation data, LBR iiwa 7 R800

Foundation loads The specified forces and moments already include the payload and the inertia force (weight) of the robot.

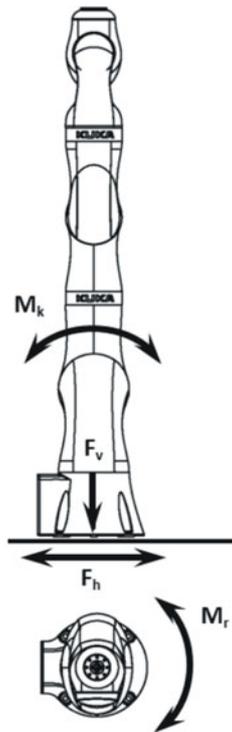


Fig. 4-3: Foundation loads for floor-mounted robots

Vertical force	524 N
Horizontal force	240 N
Tilting moment	310 Nm
Torque about axis 1	156 Nm

NOTICE The foundation loads specified in the table are the maximum loads that may occur. They must be referred to when dimensioning the foundations and must be adhered to for safety reasons. Failure to do so may result in material damage.

4.3 Technical data, LBR iiwa 14 R820

4.3.1 Basic data, LBR iiwa 14 R820

Basic data

	LBR iiwa 14 R820
Number of axes	7
Number of controlled axes	7
Volume of working envelope	1.8 m ³
Pose repeatability (ISO 9283)	± 0.15 mm
Weight	approx. 29.9 kg
Rated payload	14 kg
Maximum reach	820 mm
Protection rating	IP 54
Protection rating, in-line wrist	IP 54

	LBR iiwa 14 R820
Sound level	< 75 dB (A)
Mounting position	Floor
Footprint	-
Permissible angle of inclination	-
Default color	-
Controller	KUKA Sunrise Cabinet
Transformation name	-

Ambient conditions

Ambient temperature during operation	5 °C to 45 °C (278 K to 318 K)
Ambient temperature during storage/transportation	0 °C to 45 °C (273 K to 318 K)
Air humidity	20 % to 80 %

4.3.2 Axis data, LBR iiwa 14 R820

Axis data

Range of motion	
A1	±170 °
A2	±120 °
A3	±170 °
A4	±120 °
A5	±170 °
A6	±120 °
A7	±175 °
Speed with rated payload	
A1	85 °/s
A2	85 °/s
A3	100 °/s
A4	75 °/s
A5	130 °/s
A6	135 °/s
A7	135 °/s

Working envelope

The diagram (>>> Fig. 4-4) shows the shape and size of the working envelope for the robot:

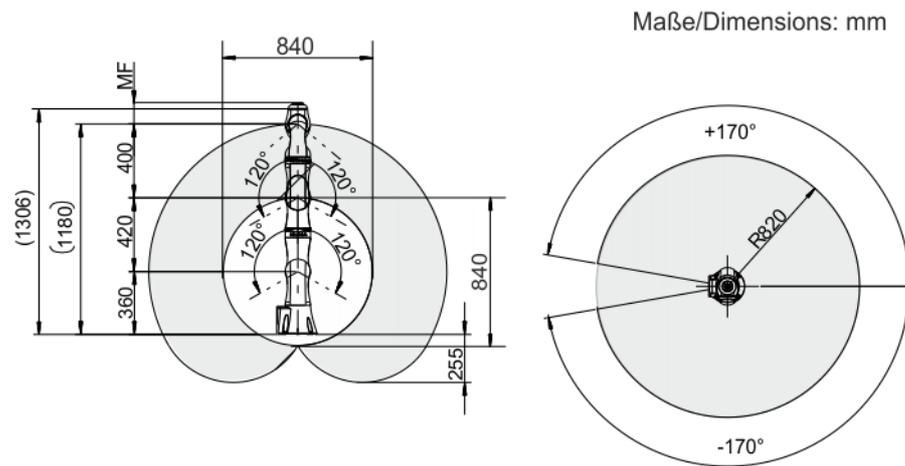


Fig. 4-4: Working envelope, LBR iiwa 14 R820



The height of the LBR iiwa depends on the media flange mounted on it. The dimensions of the media flange can be found in the Media Flange documentation.

4.3.3 Payloads, LBR iiwa 14 R820

Payloads

Rated payload	14 kg
Rated mass moment of inertia	0.3 kgm ²
Rated total load	14 kg
Rated supplementary load, base frame	0 kg
Maximum supplementary load, base frame	-
Rated supplementary load, rotating column	0 kg
Maximum supplementary load, rotating column	-
Rated supplementary load, link arm	0 kg
Maximum supplementary load, link arm	-
Rated supplementary load, arm	0 kg
Maximum supplementary load, arm	-
Nominal distance to load center of gravity	
Lxy	40 mm
Lz	44 mm

Load center of gravity P

For all payloads, the load center of gravity refers to the distance from the face of the mounting flange on axis A7.

Payload diagram

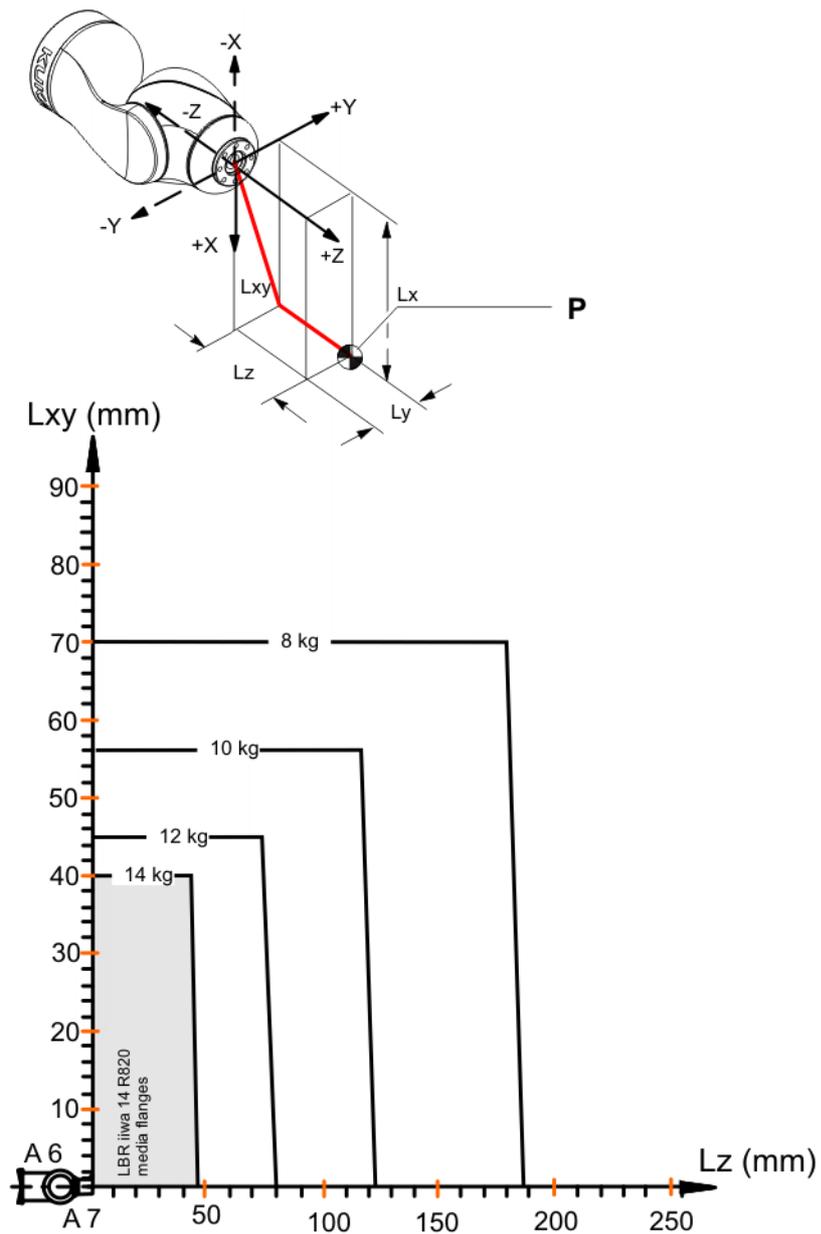


Fig. 4-5: Payload diagram, LBR iiwa 14 R820

i The payloads depend on the type of media flange used. Further information about the payloads dependent on the media flange can be found in the **Media Flange** documentation.

NOTICE This loading curve corresponds to the maximum load capacity. Both values (payload and mass moment of inertia) must be checked in all cases. Exceeding this capacity will reduce the service life of the robot and overload the motors and the gears; in any such case KUKA Customer Support must be consulted beforehand. The values determined here are necessary for planning the robot application. For commissioning the robot, additional input data are required in accordance with the operating and programming instructions of the control software.

Supplementary load

The robot cannot carry a supplementary load.

4.3.4 Foundation data, LBR iiwa 14 R820

Foundation loads The specified forces and moments already include the payload and the inertia force (weight) of the robot.

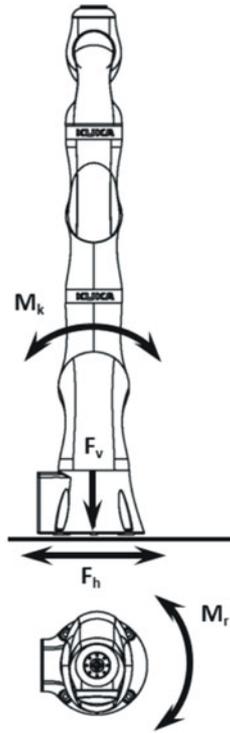



Fig. 4-6: Foundation loads for floor-mounted robots

Vertical force	541.2 N
Horizontal force	228.4 N
Tilting moment	281.6 Nm
Torque about axis 1	172.6 Nm

NOTICE The foundation loads specified in the table are the maximum loads that may occur. They must be referred to when dimensioning the foundations and must be adhered to for safety reasons. Failure to do so may result in material damage.

4.4 Plates and labels

Identification plate The following plates and labels are attached to the robot. They must not be removed or rendered illegible. Illegible plates and labels must be replaced.

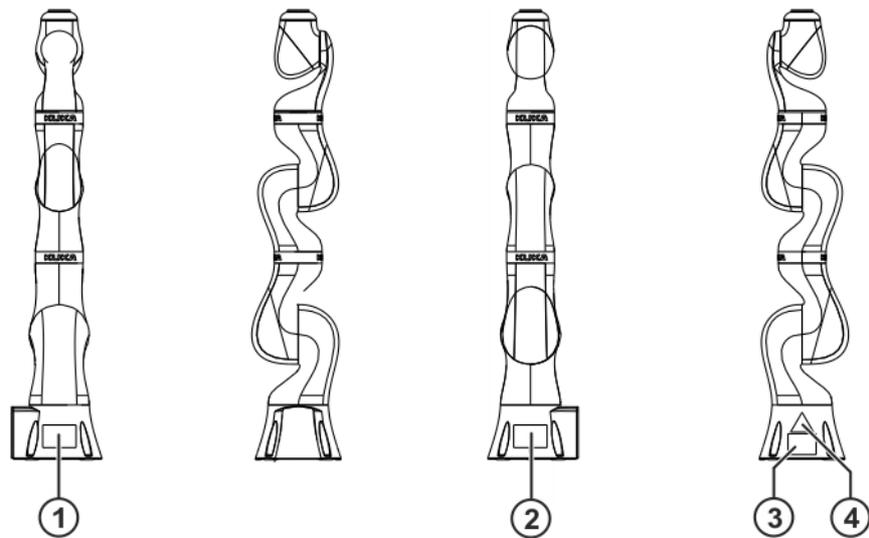

1

Transportstellung:
Transport position:
Position de transport:

A1	A2	A3	A4	A5	A6	A7
0°	0°	0°	0°	0°	0°	0°

ACHTUNG! Vor dem Lösen der Fundamentbefestigungsschrauben muss der Roboter in Transportstellung gebracht werden!

CAUTION! The robot must be in the transport position before the holding-down bolts are slackened!

ATTENTION! Le robot doit être armé en position de transport avant de desserrer les boulons de fixation des fondations!

Artikel-Nr.: 00-207-836 de/en/fr

3

KUKA KUKA Laboratories GmbH
Zugspitzstrasse 140

Typ	Type	Type	LBR iiwa 14 R820
Artikel-Nr.	Article No.	No. d'article	XXXXXX
Serien-Nr.	Serial No.	No. de Série	XXXXXX
Baujahr	Date	Année de fabric.	2013-6
Gewicht	Weight	Poids	29,5 kg
Traglast	Load	Charge	14 kg
Reichweite	Range	Portée	820 mm
\$TRAFONAME{=}#			
..IMADA!			

00-207-239

2

ACHTUNG! CAUTION! ATTENTION!

Vor Aufstellung, Inbetriebnahme, Montage- und Wartungsarbeiten die Betriebsanleitung und Sicherheitshinweise lesen und beachten!

Before installation, start-up, maintenance or disassembling read and follow the safety directions and operating instructions!

Avant installation, mise en service, réparation et maintenance veuillez lire les chapitres correspondants du manuel ainsi que les consignes de sécurité et les respecter!

Artikel-Nr.: 00-207-836 de/en/fr

4



Fig. 4-7: Plates and labels

4.5 Stopping distances and times

4.5.1 General information

Information concerning the position control data:

- The stopping distance is the angle traveled by the robot from the moment the stop signal is triggered until the robot comes to a complete standstill.
- The stopping time is the time that elapses from the moment the stop signal is triggered until the robot comes to a complete standstill.
- The data are given for axes A1, A2, A3 and A4. These axes are the axes with the greatest deflection.
- Superposed axis motions can result in longer stopping distances.
- Stopping distances and stopping times in accordance with DIN EN ISO 10218-1, Annex B.
- Stop categories:
 - Stop category 0 » STOP 0

- Stop category 1 » STOP 1 according to IEC 60204-1
- The values specified for Stop 0 are guide values determined by means of tests and simulation. They are average values which conform to the requirements of DIN EN ISO 10218-1. The actual stopping distances and stopping times may differ due to internal and external influences on the braking torque. It is therefore advisable to determine the exact stopping distances and stopping times where necessary under the real conditions of the actual robot application.
- Measuring technique
The stopping distances were measured using the robot-internal measuring technique.
- The wear on the brakes varies depending on the operating mode, robot application and the number of STOP 0 stops triggered. It is therefore advisable to check the stopping distance at least once a year.

4.5.2 Terms used

Term	Description
m	Mass of the rated load and the supplementary load on the arm.
Phi	Angle of rotation (°) about the corresponding axis. This value can be entered in the controller via the KCP and is displayed on the KCP.
POV	Program override (%) = velocity of the robot motion. This value can be entered in the controller via the KCP and is displayed on the KCP.
Extension	Distance (l in %) between axis 1 and the intersection of axes 6 and 7.
KCP	The KCP teach pendant has all the operator control and display functions required for operating and programming the robot system.

Extension

The following figures illustrate the 33%, 66% and 100% extensions of axes A1-A4:

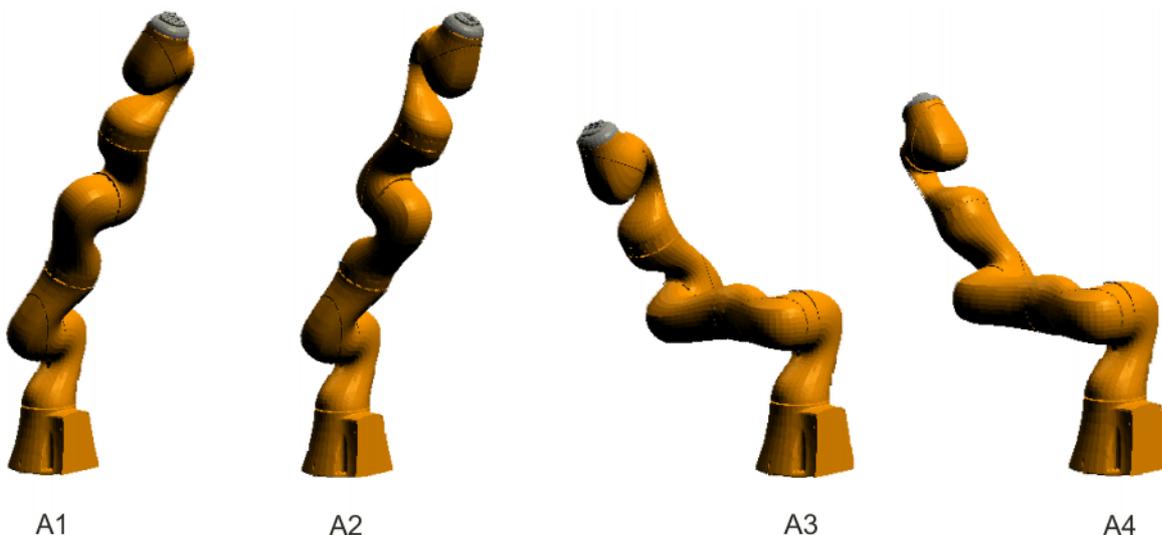


Fig. 4-8: 33% extension, axis 1 - axis 4

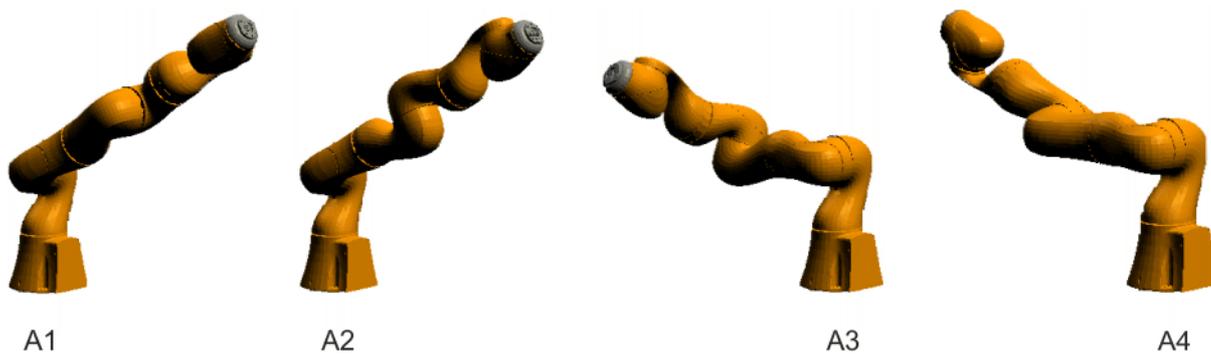


Fig. 4-9: 66% extension, axis 1 - axis 4

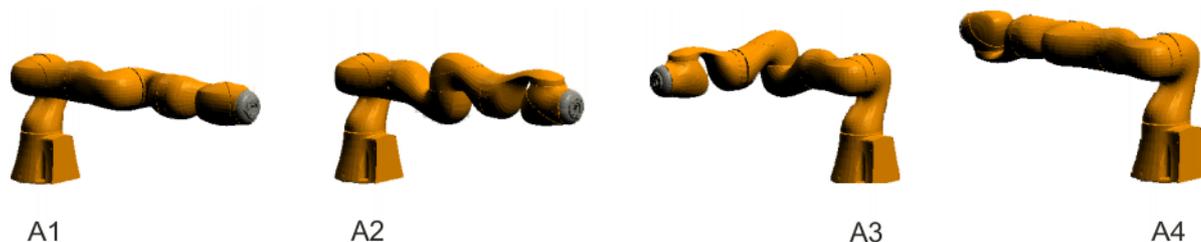


Fig. 4-10: 100% extension, axis 1 - axis 4

4.5.3 Stopping distances and stopping times for LBR iiwa 7 R800

4.5.3.1 Stopping distances and stopping times for STOP 0, axis 1 to axis 4

The table shows the stopping distances and stopping times after a STOP 0 (category 0 stop) is triggered. The values refer to the following configuration:

- Extension $l = 100\%$
- Program override POV = 100%
- Mass $m =$ maximum load (rated load + supplementary load on arm)

	Stopping distance (°)	Stopping time (s)
Axis 1	5.193	0.182
Axis 2	5.092	0.212
Axis 3	8.091	0.166
Axis 4	7.538	0.114

4.5.3.2 Stopping distances and stopping times for STOP 1, axis 1

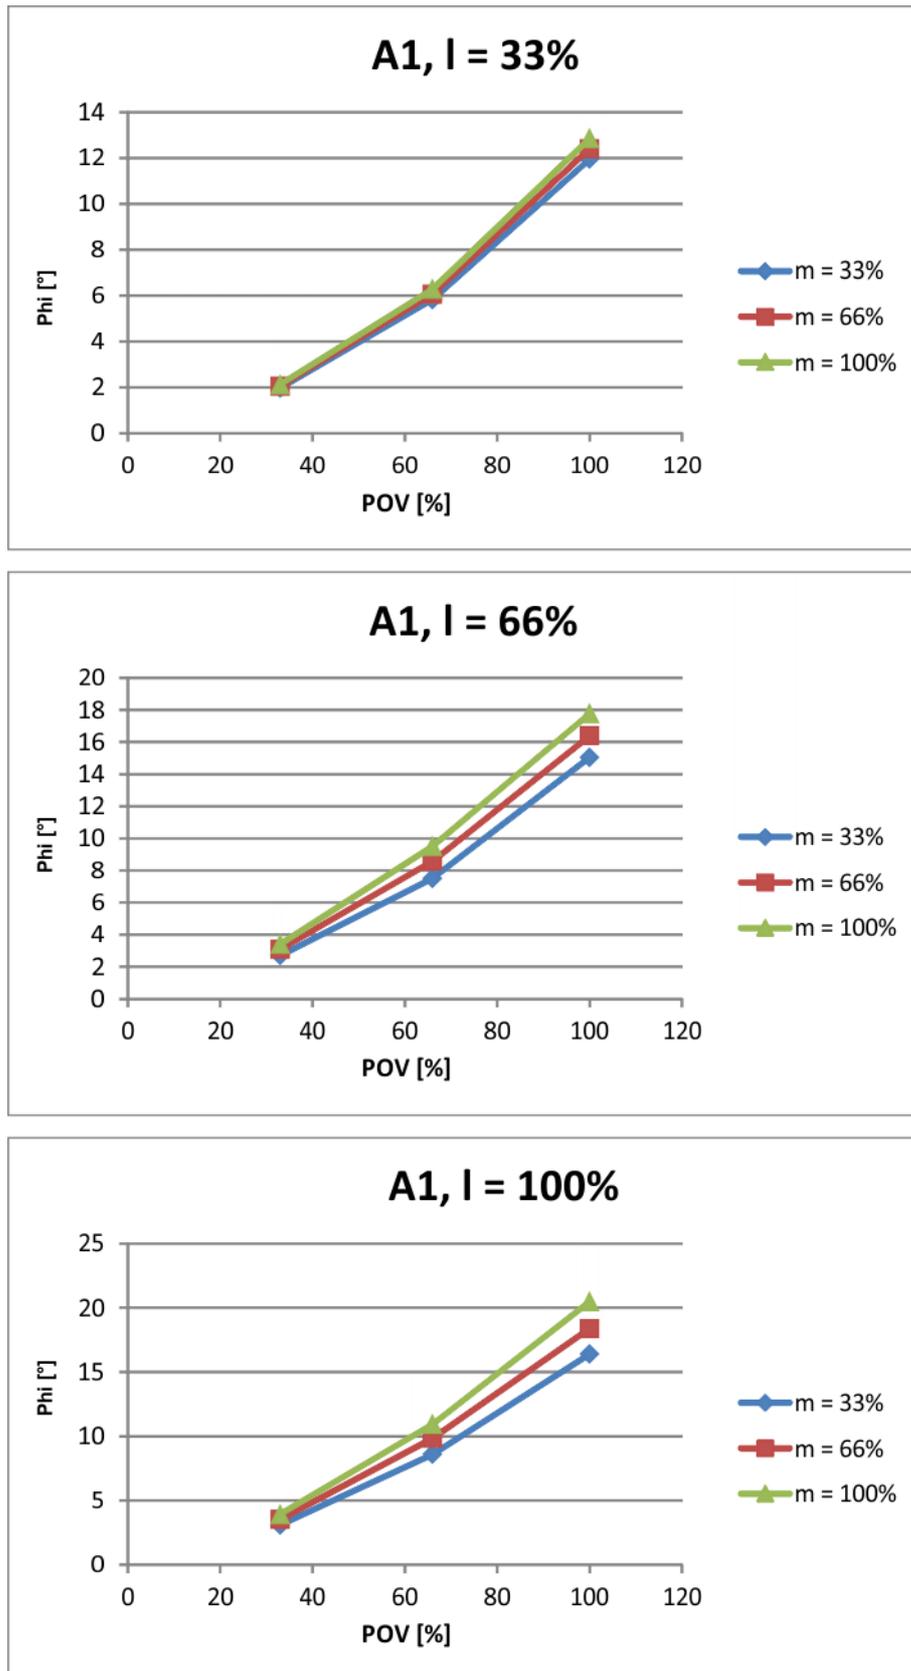


Fig. 4-11: Stopping distances for STOP 1, axis 1

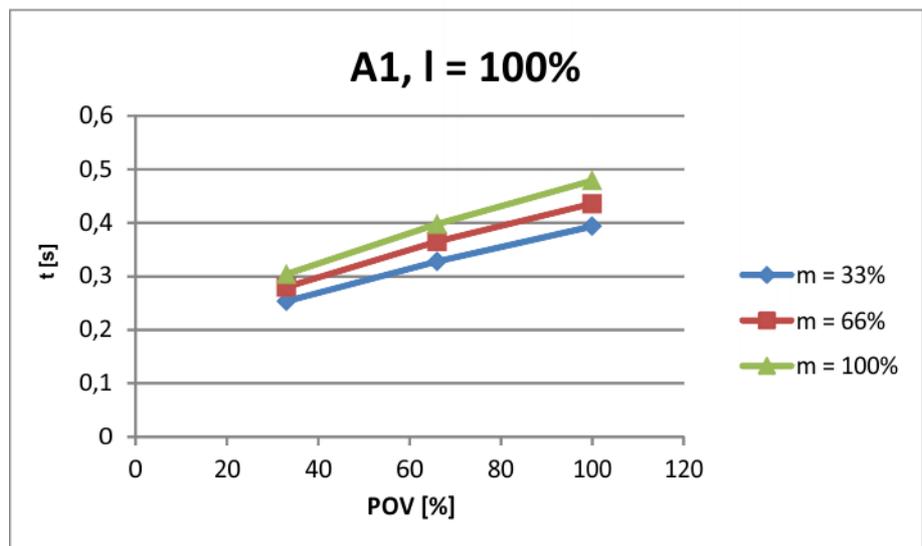
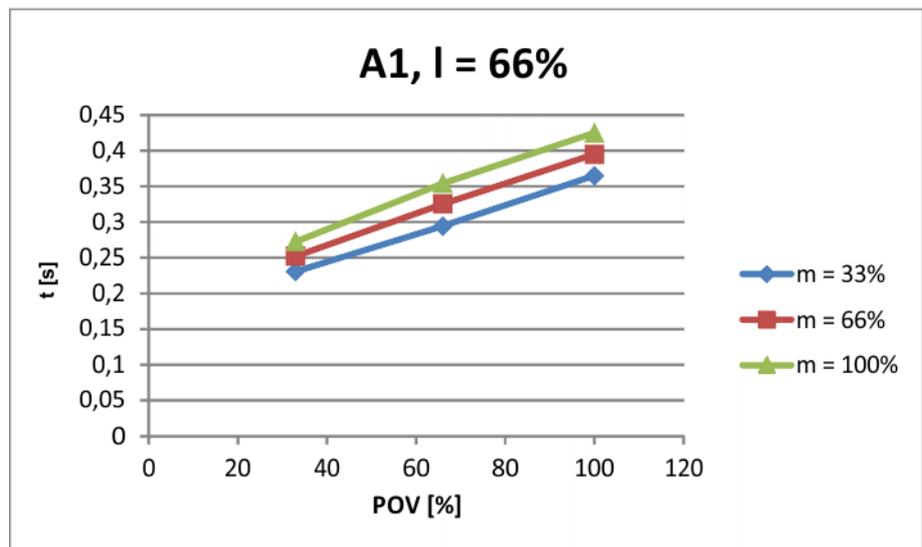
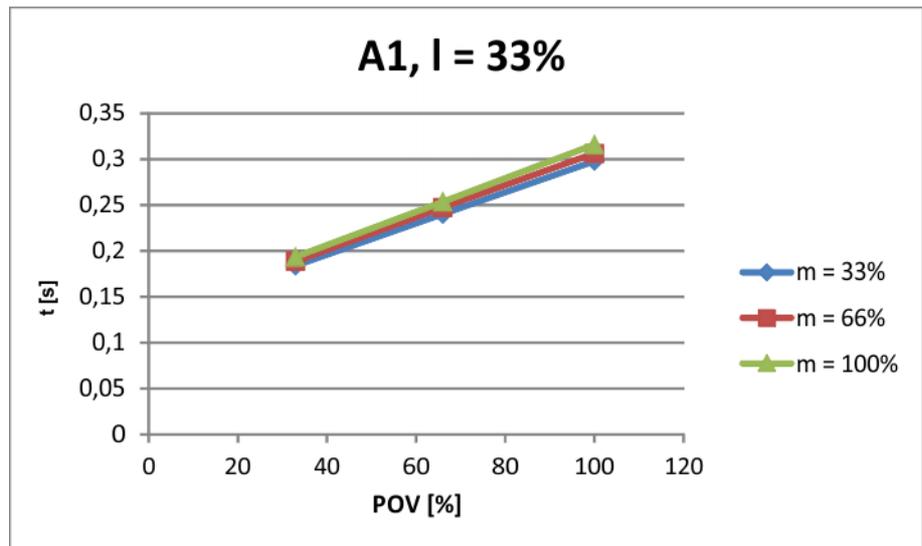


Fig. 4-12: Stopping times for STOP 1, axis 1

4.5.3.3 Stopping distances and stopping times for STOP 1, axis 2

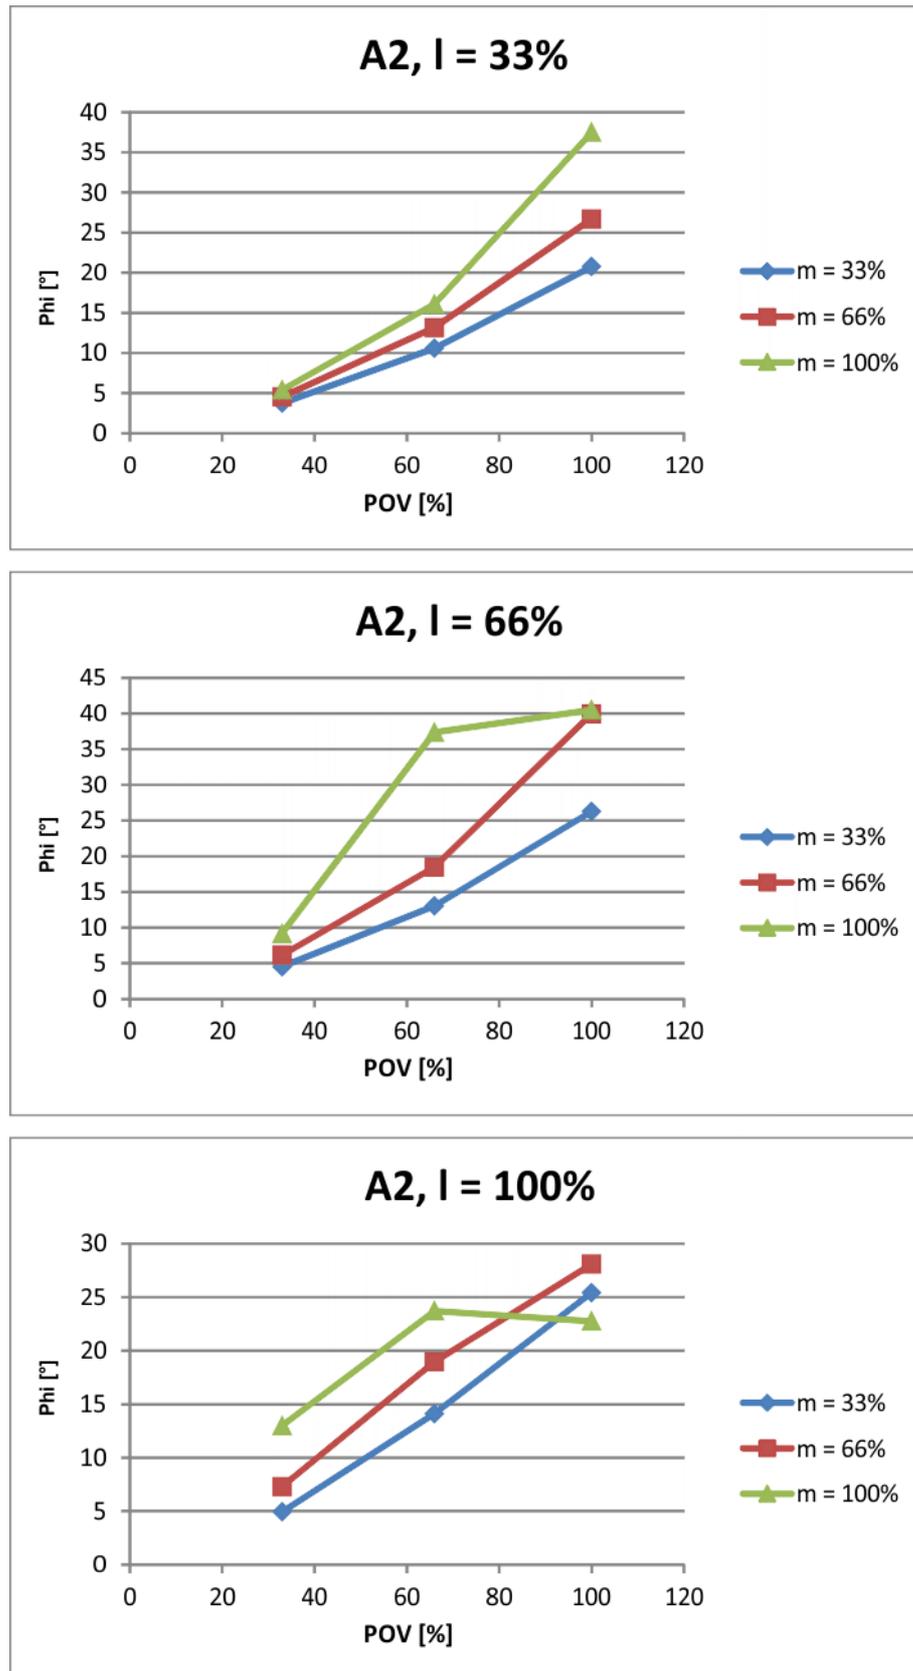


Fig. 4-13: Stopping distances for STOP 1, axis 2

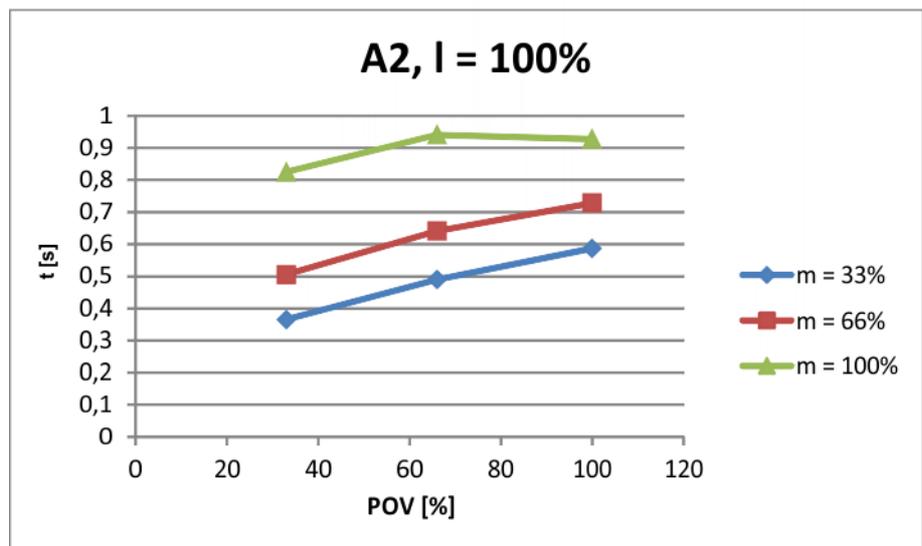
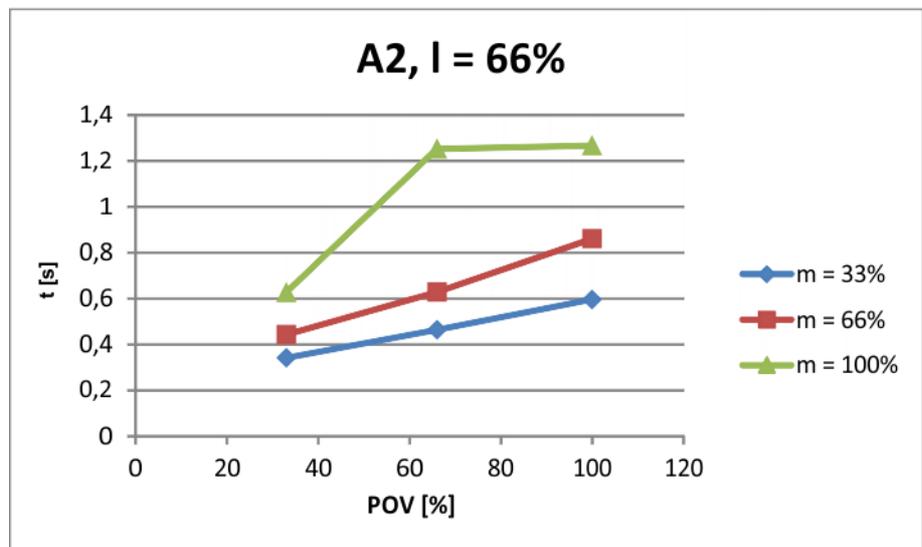
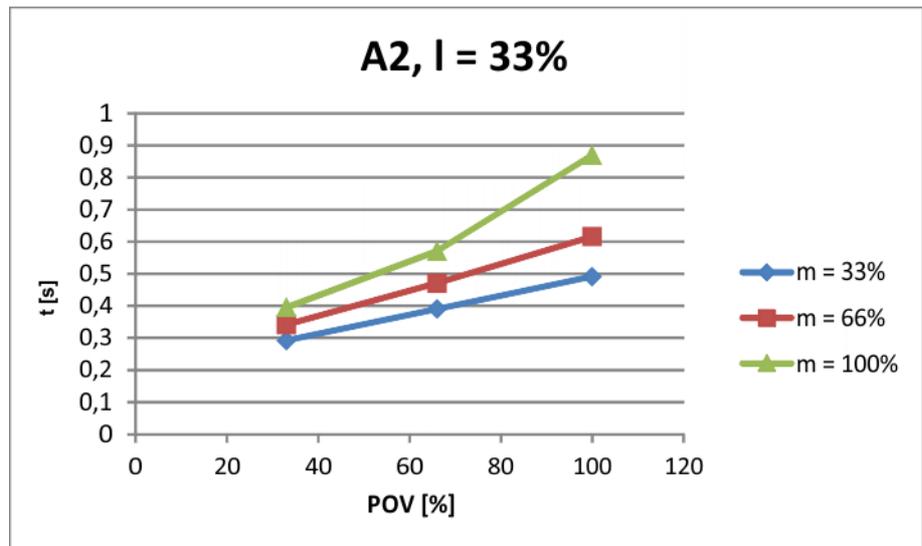


Fig. 4-14: Stopping times for STOP 1, axis 2

4.5.3.4 Stopping distances and stopping times for STOP 1, axis 3

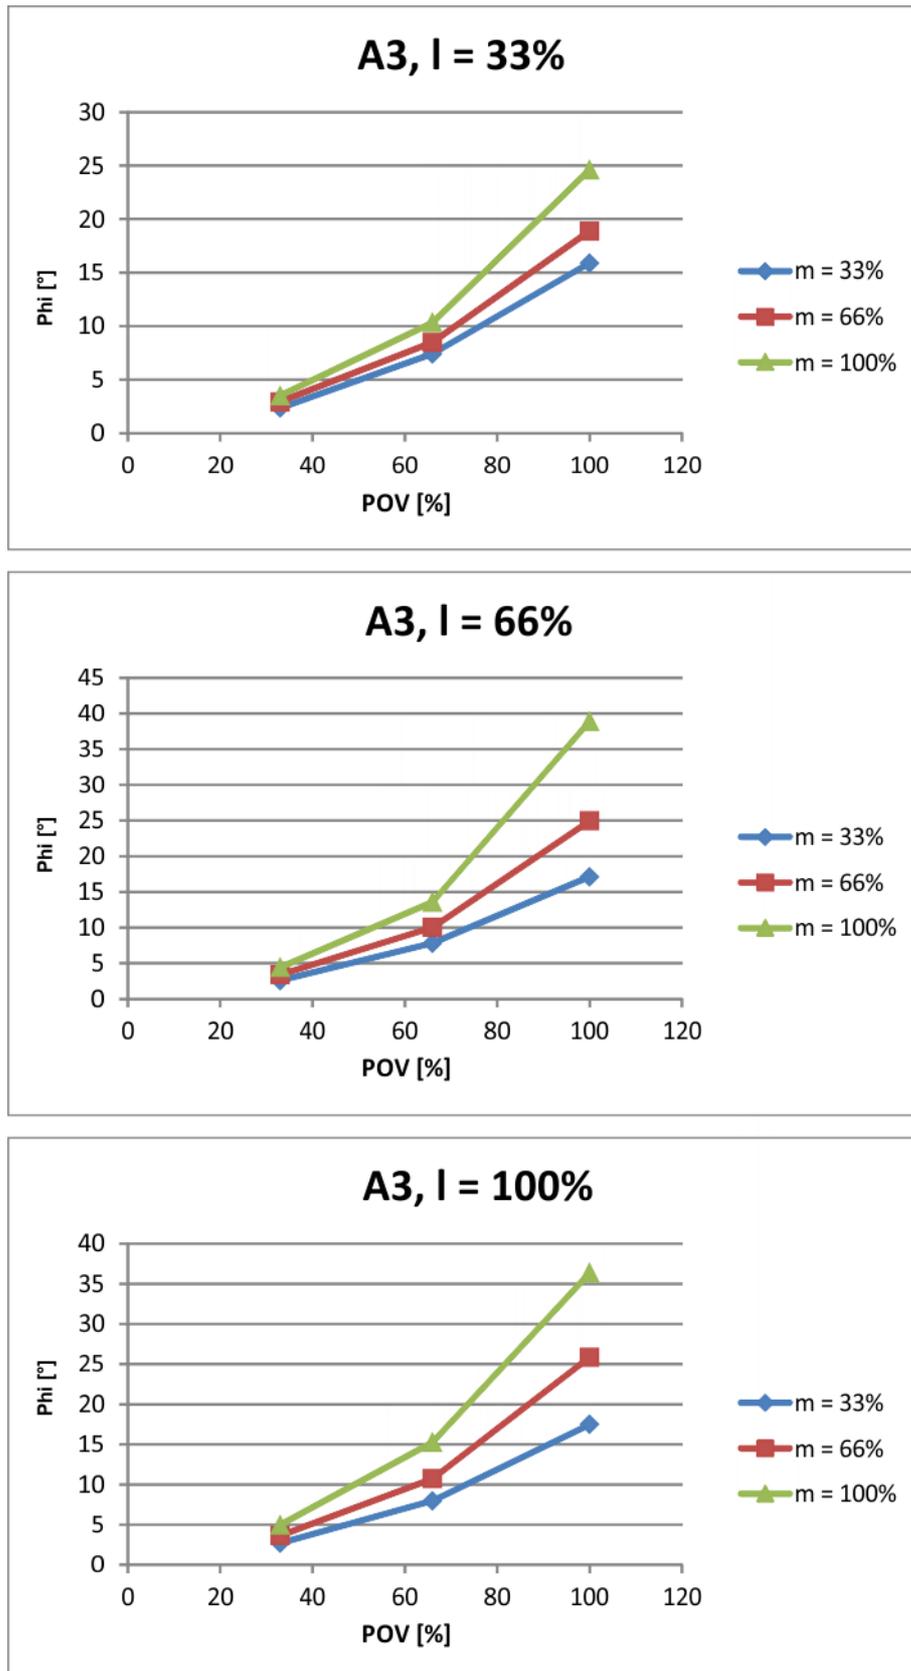


Fig. 4-15: Stopping distances for STOP 1, axis 3

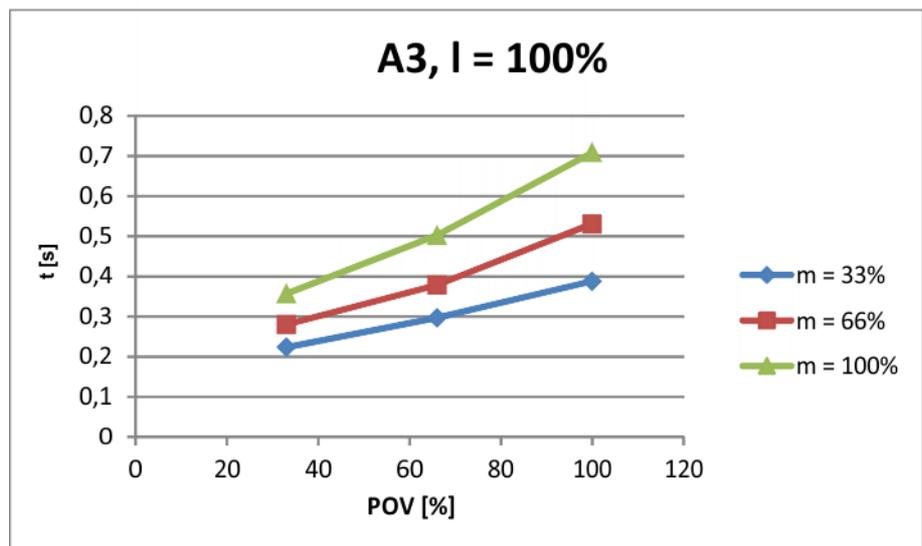
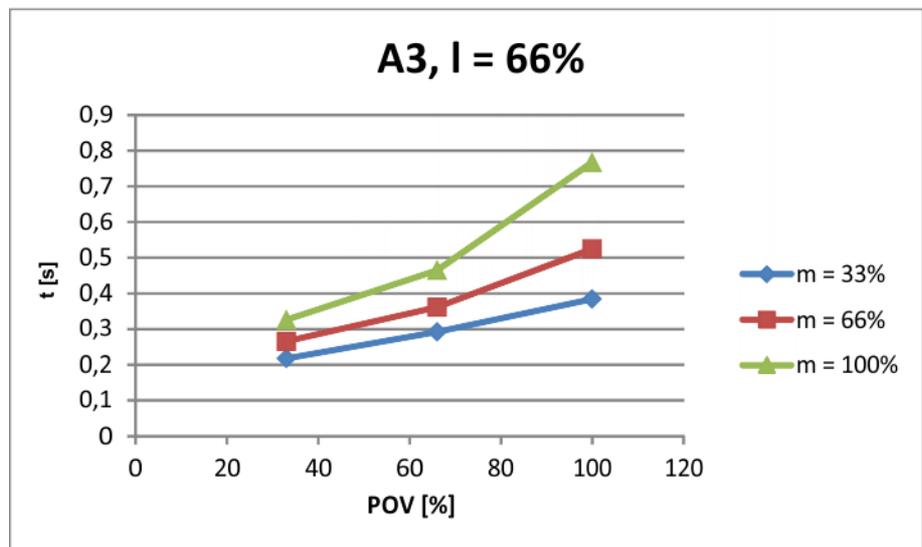
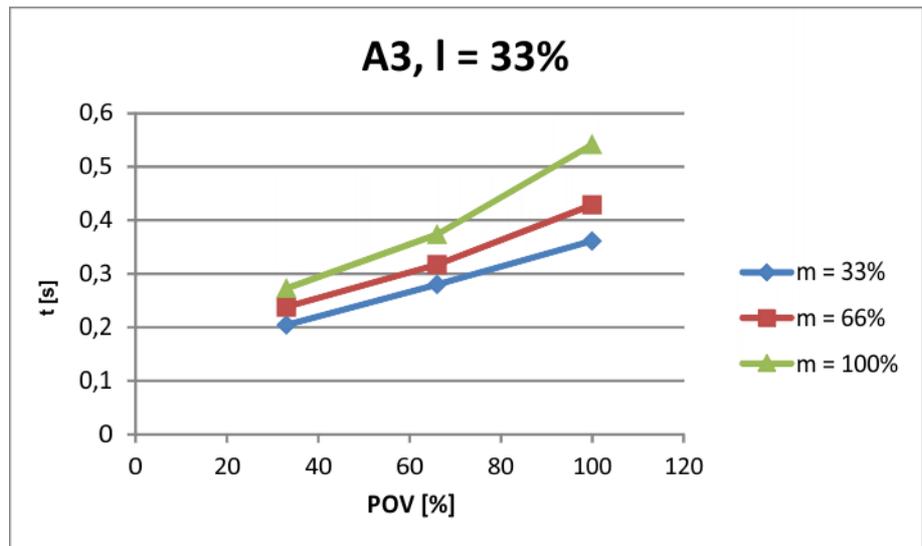


Fig. 4-16: Stopping times for STOP 1, axis 3

4.5.3.5 Stopping distances and stopping times for STOP 1, axis 4

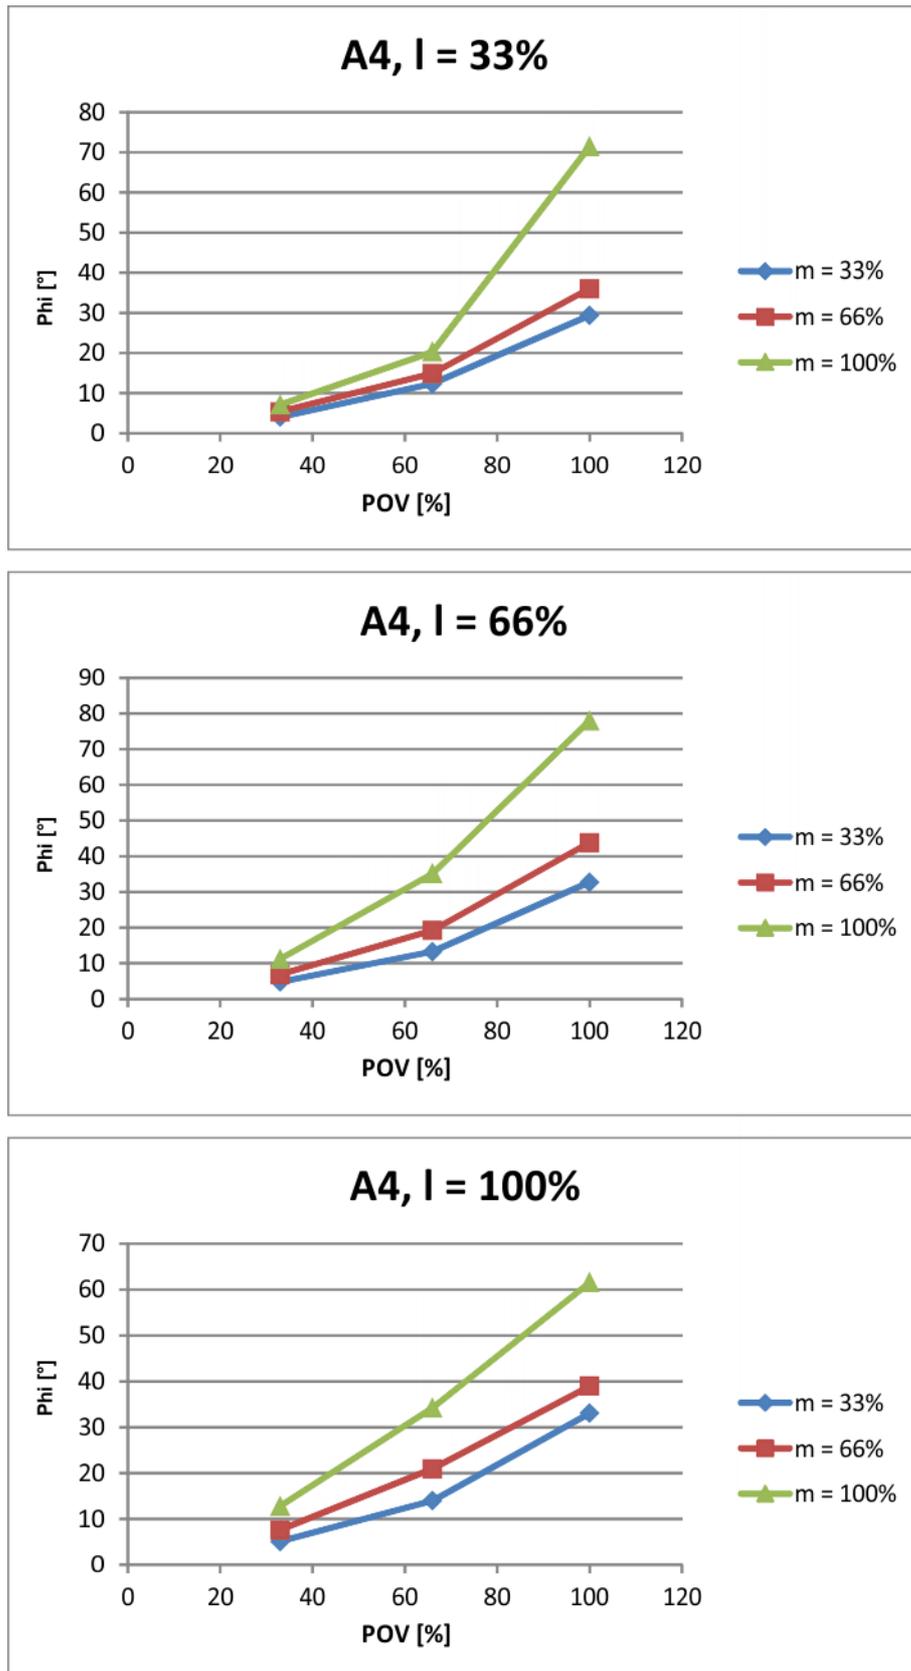


Fig. 4-17: Stopping distances for STOP 1, axis 4

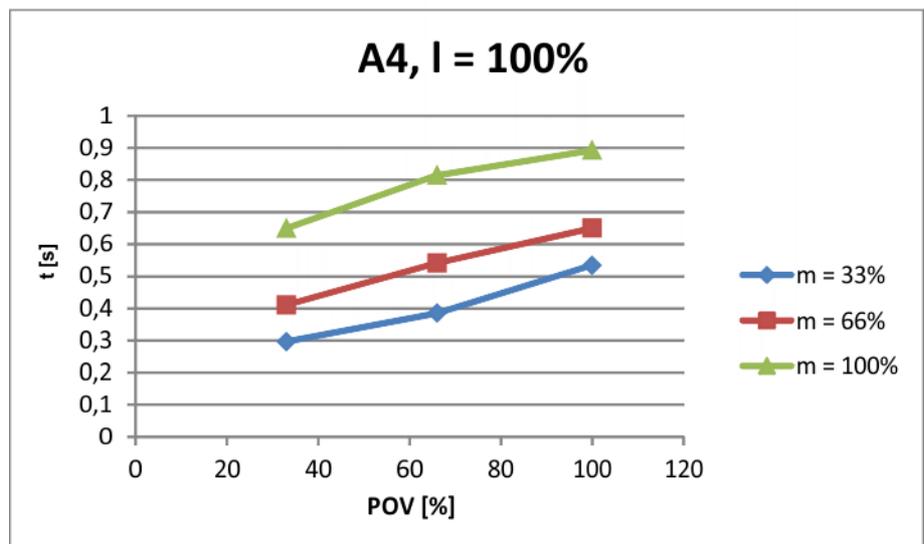
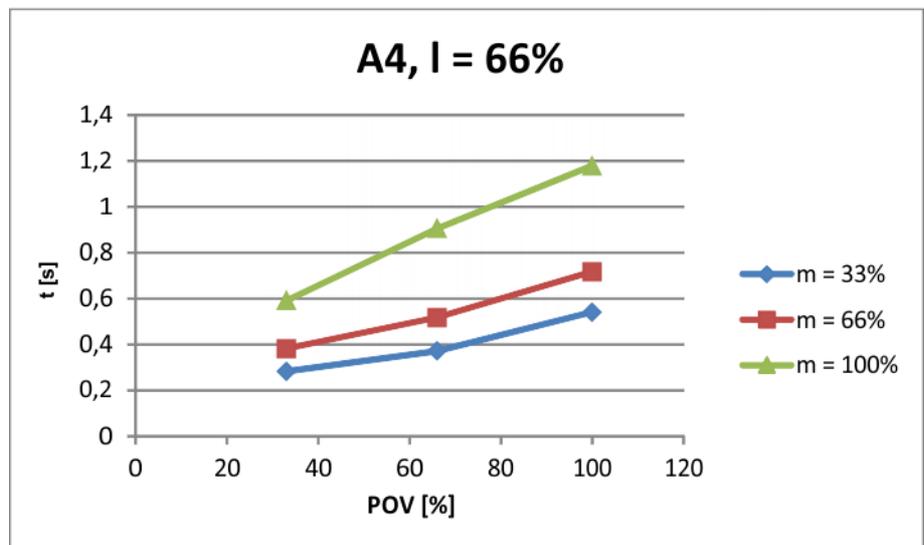
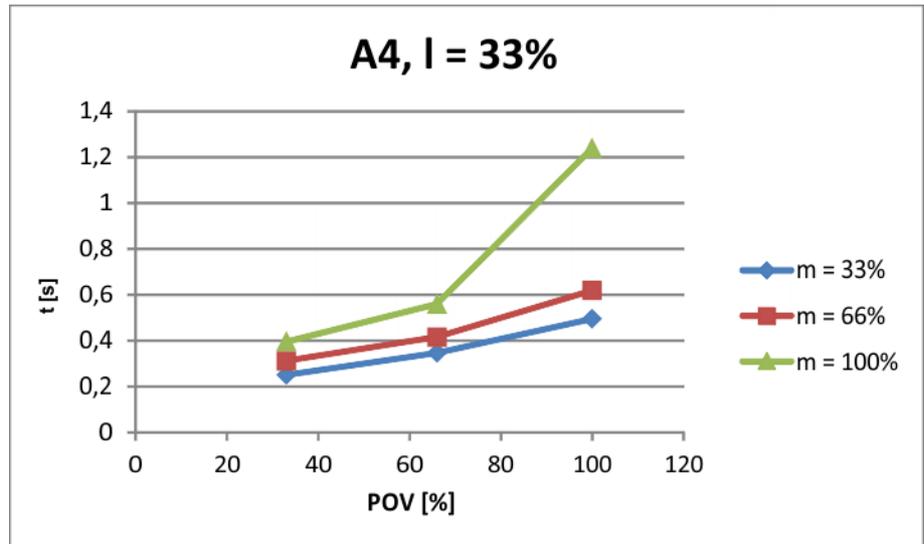


Fig. 4-18: Stopping times for STOP 1, axis 4

4.5.4 Stopping distances and stopping times for LBR iiwa 14 R820

4.5.4.1 Stopping distances and stopping times for STOP 0, axis 1 to axis 4

The table shows the stopping distances and stopping times after a STOP 0 (category 0 stop) is triggered. The values refer to the following configuration:

- Extension l = 100%
- Program override POV = 100%
- Mass m = maximum load (rated load + supplementary load on arm)

	Stopping distance (°)	Stopping time (s)
Axis 1	5.742	0.188
Axis 2	5.998	0.200
Axis 3	9.323	0.198
Axis 4	3.162	0.092

4.5.4.2 Stopping distances and stopping times for STOP 1, axis 1

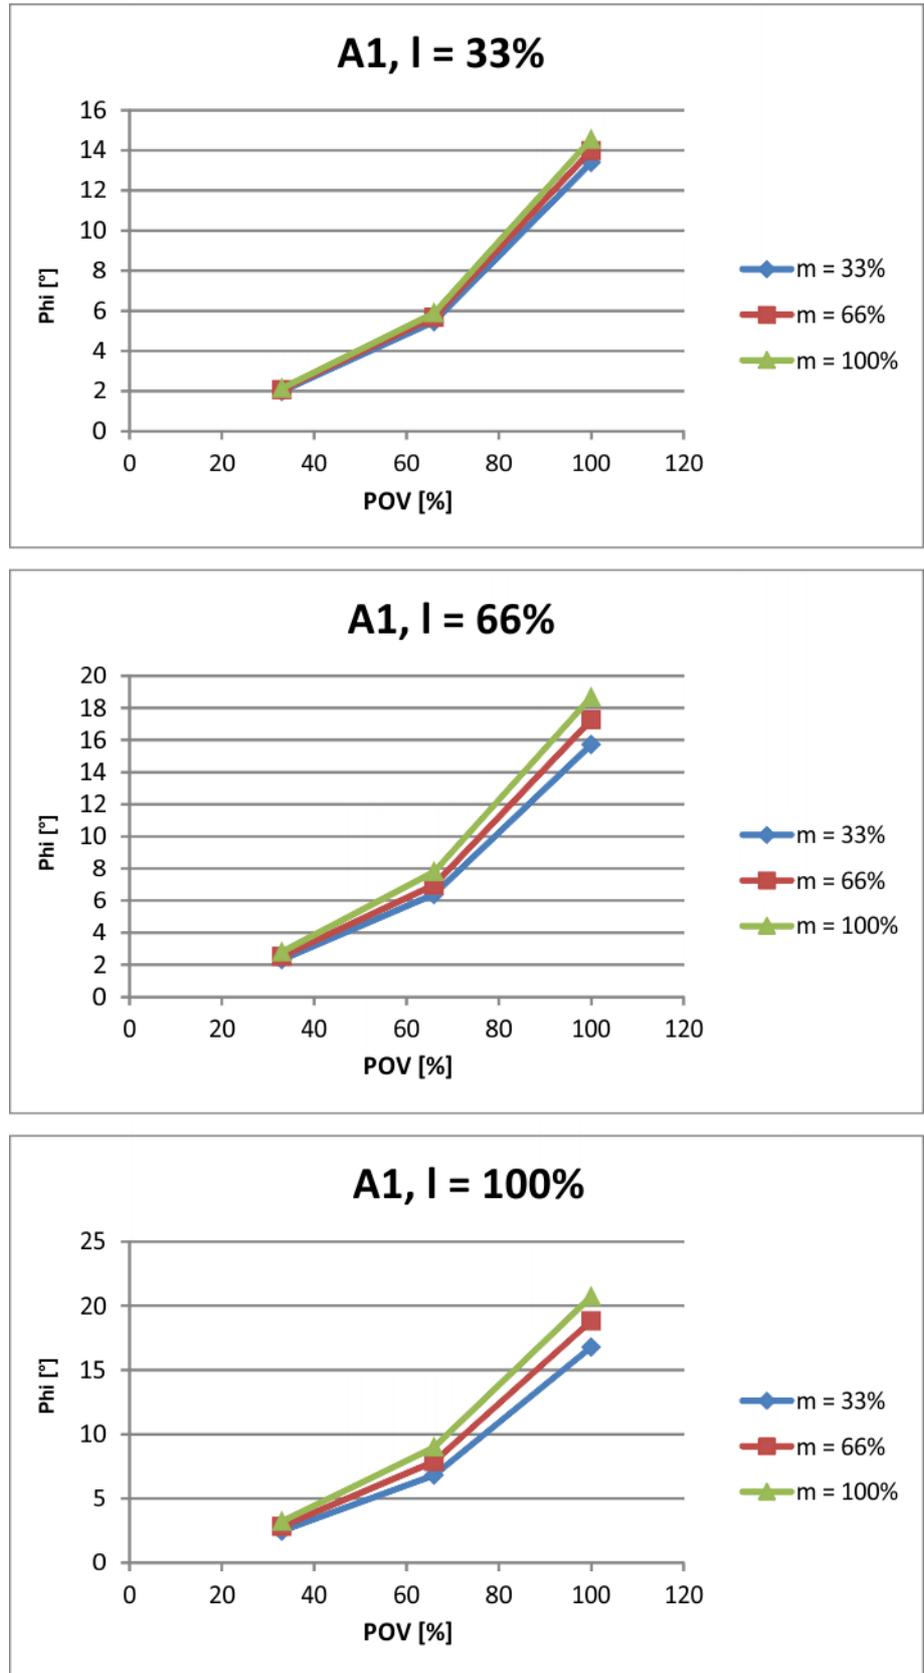


Fig. 4-19: Stopping distances for STOP 1, axis 1

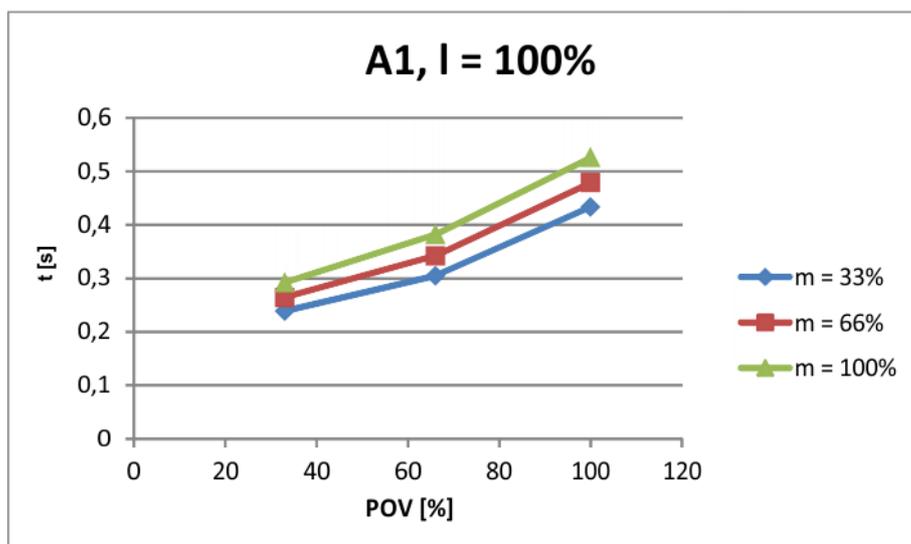
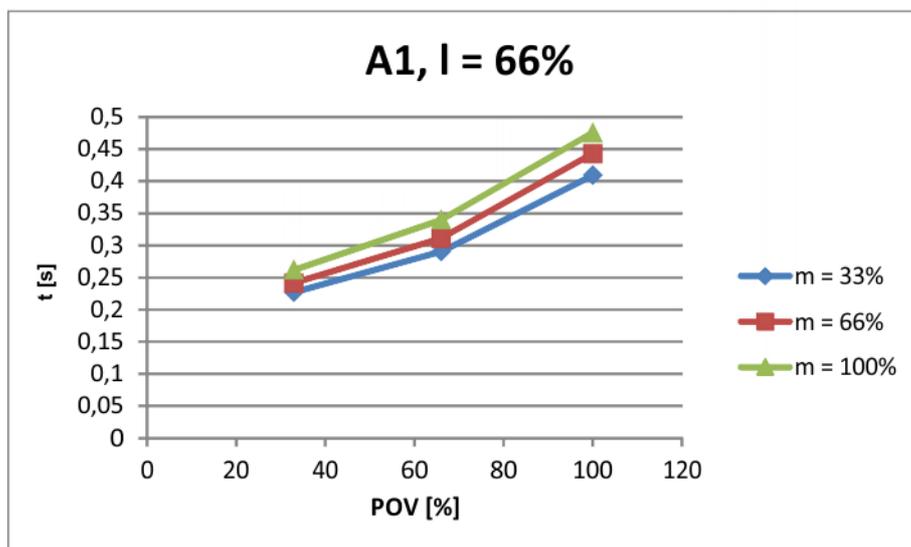
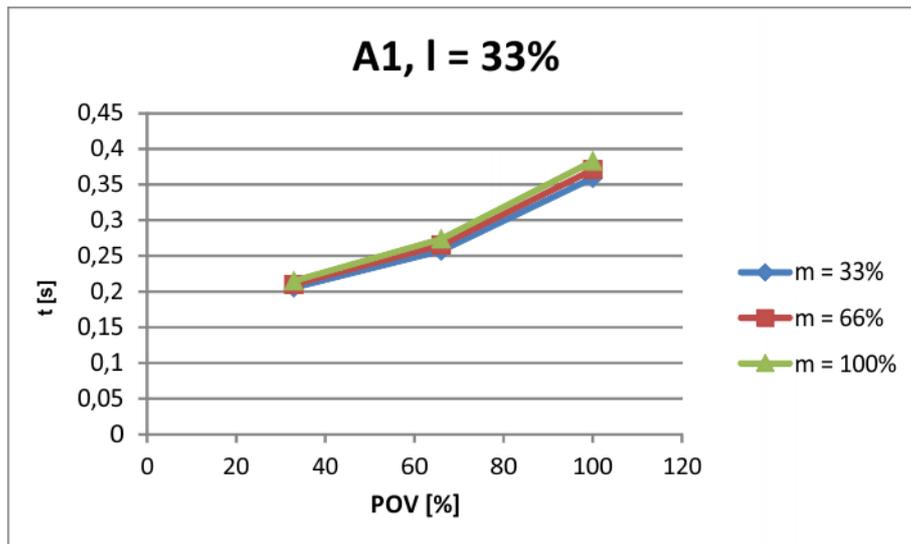


Fig. 4-20: Stopping times for STOP 1, axis 1

4.5.4.3 Stopping distances and stopping times for STOP 1, axis 2

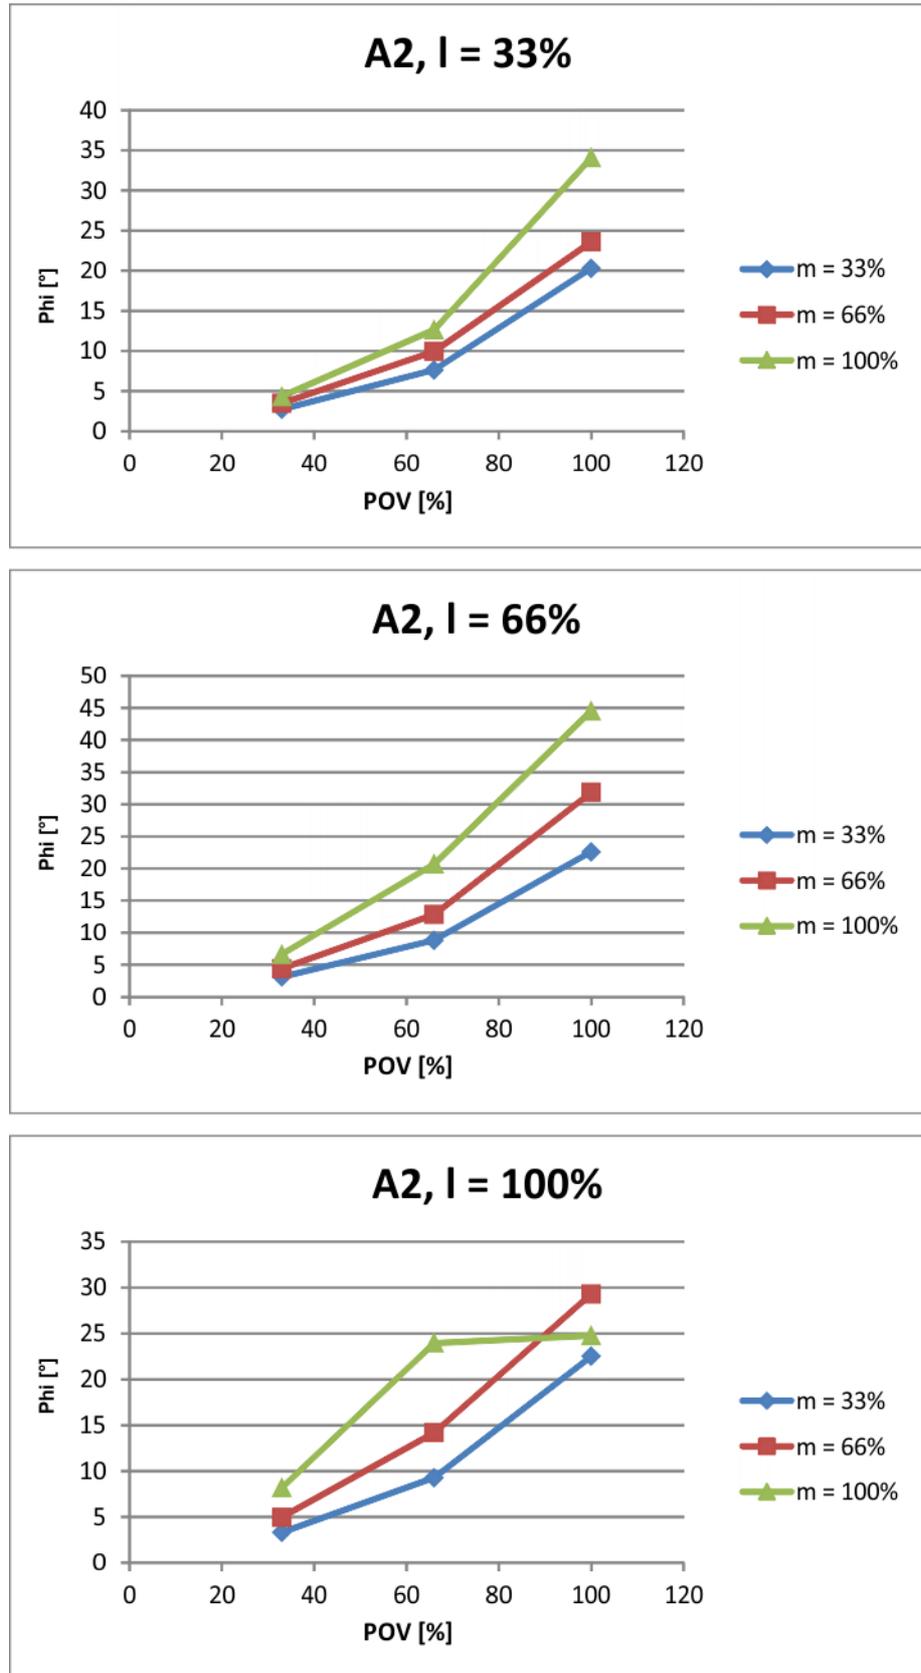


Fig. 4-21: Stopping distances for STOP 1, axis 2

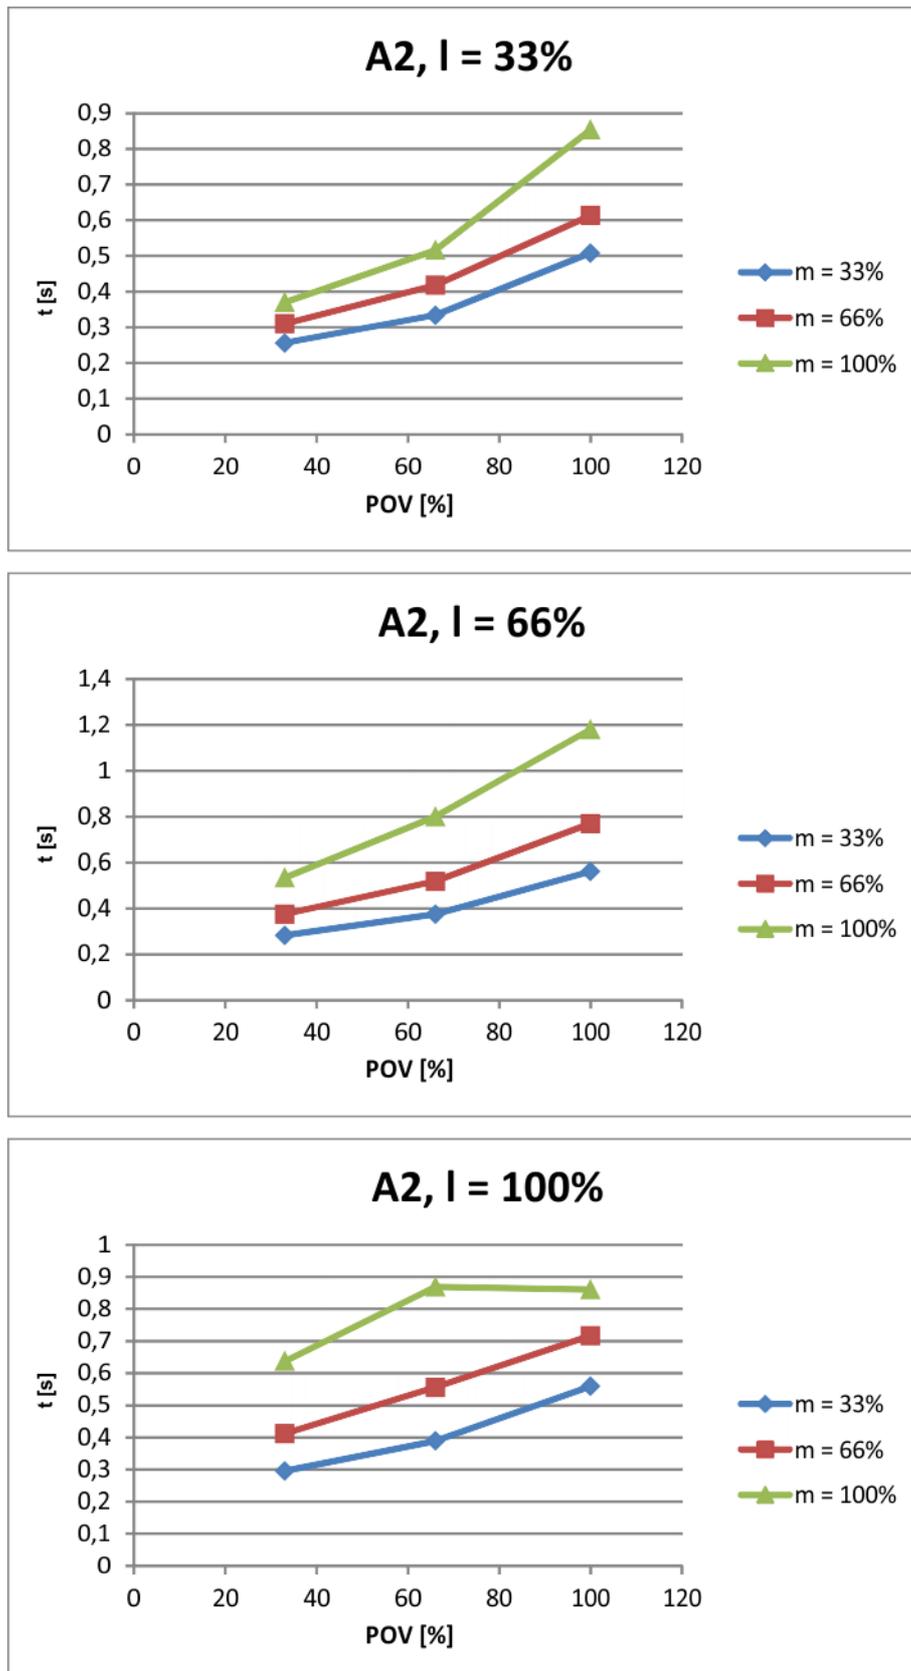


Fig. 4-22: Stopping times for STOP 1, axis 2

4.5.4.4 Stopping distances and stopping times for STOP 1, axis 3

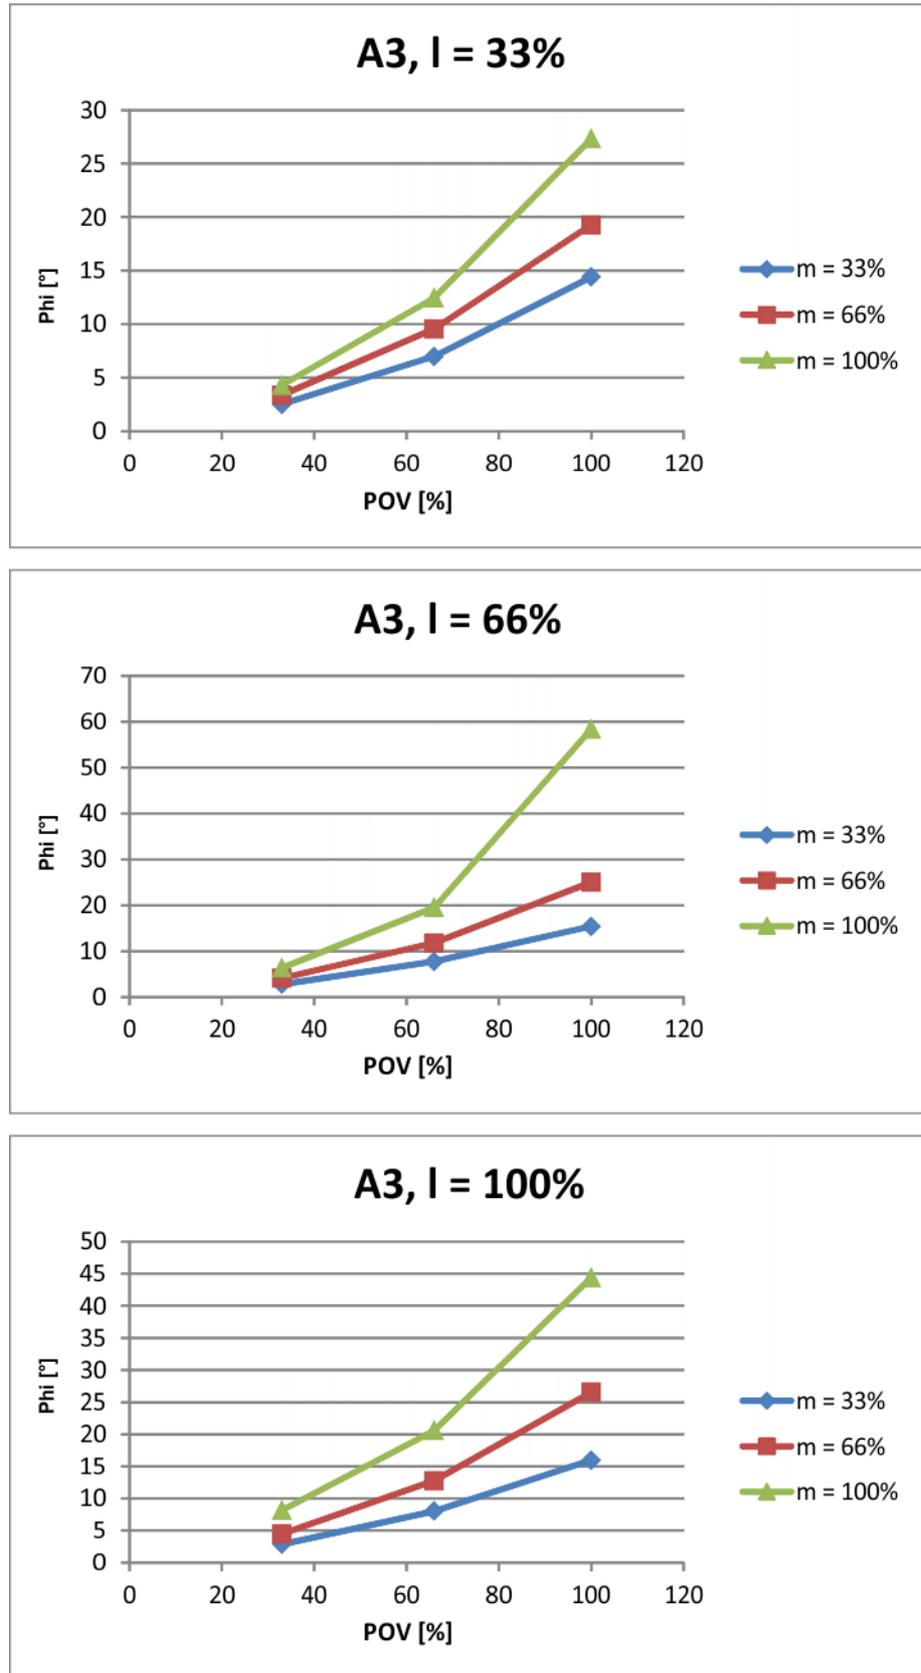


Fig. 4-23: Stopping distances for STOP 1, axis 3

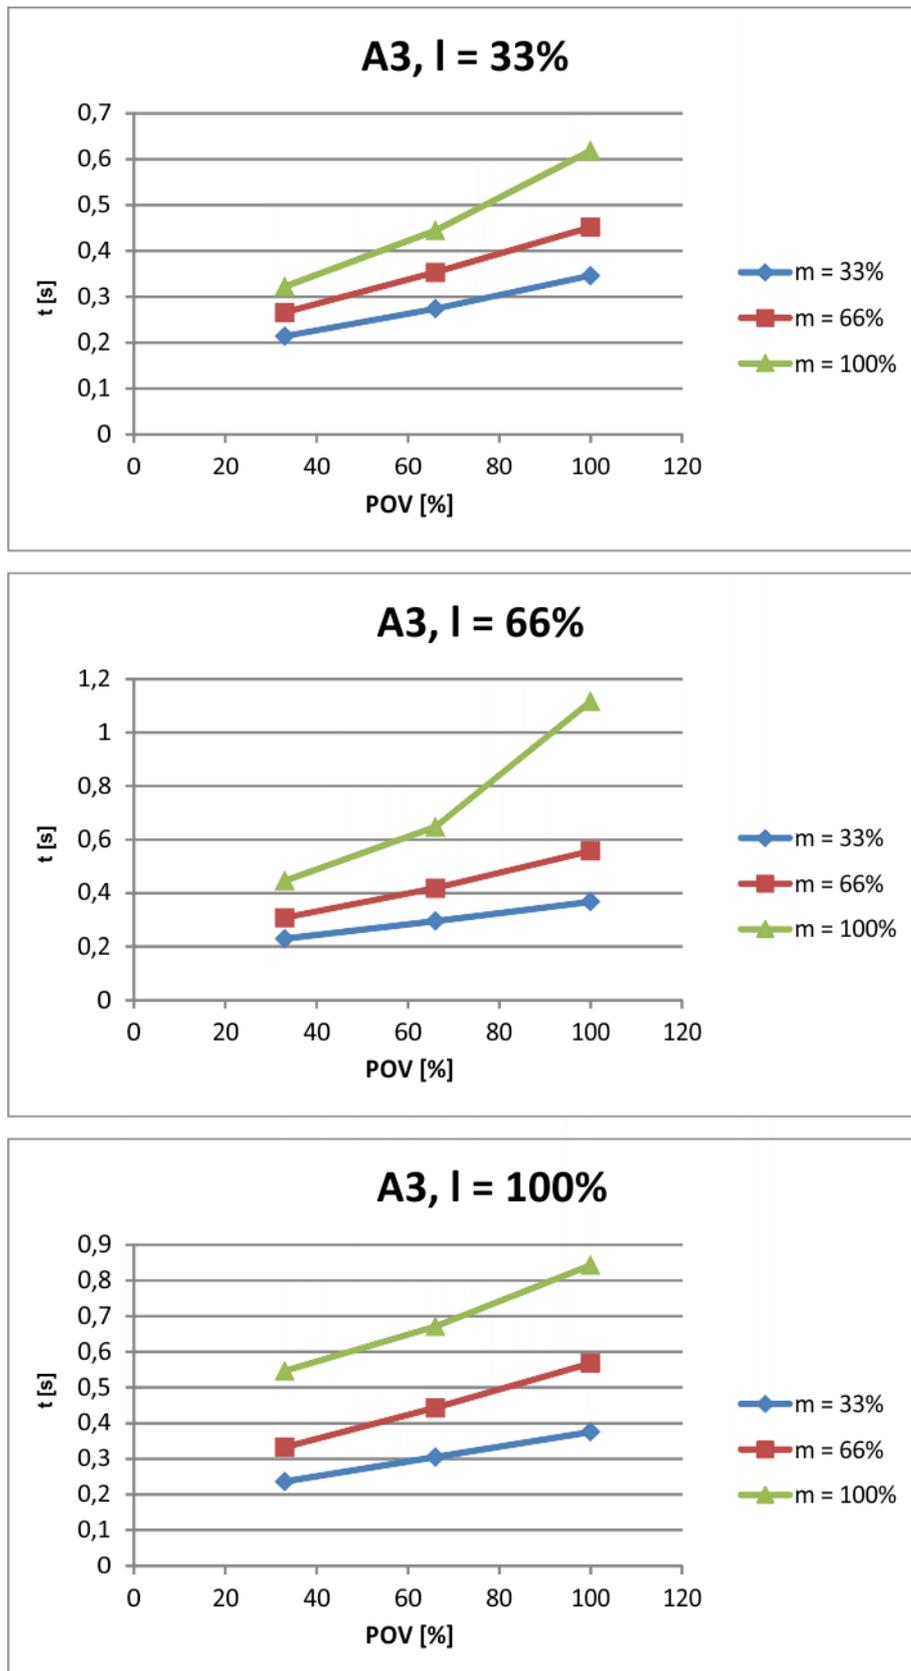


Fig. 4-24: Stopping times for STOP 1, axis 3

4.5.4.5 Stopping distances and stopping times for STOP 1, axis 4

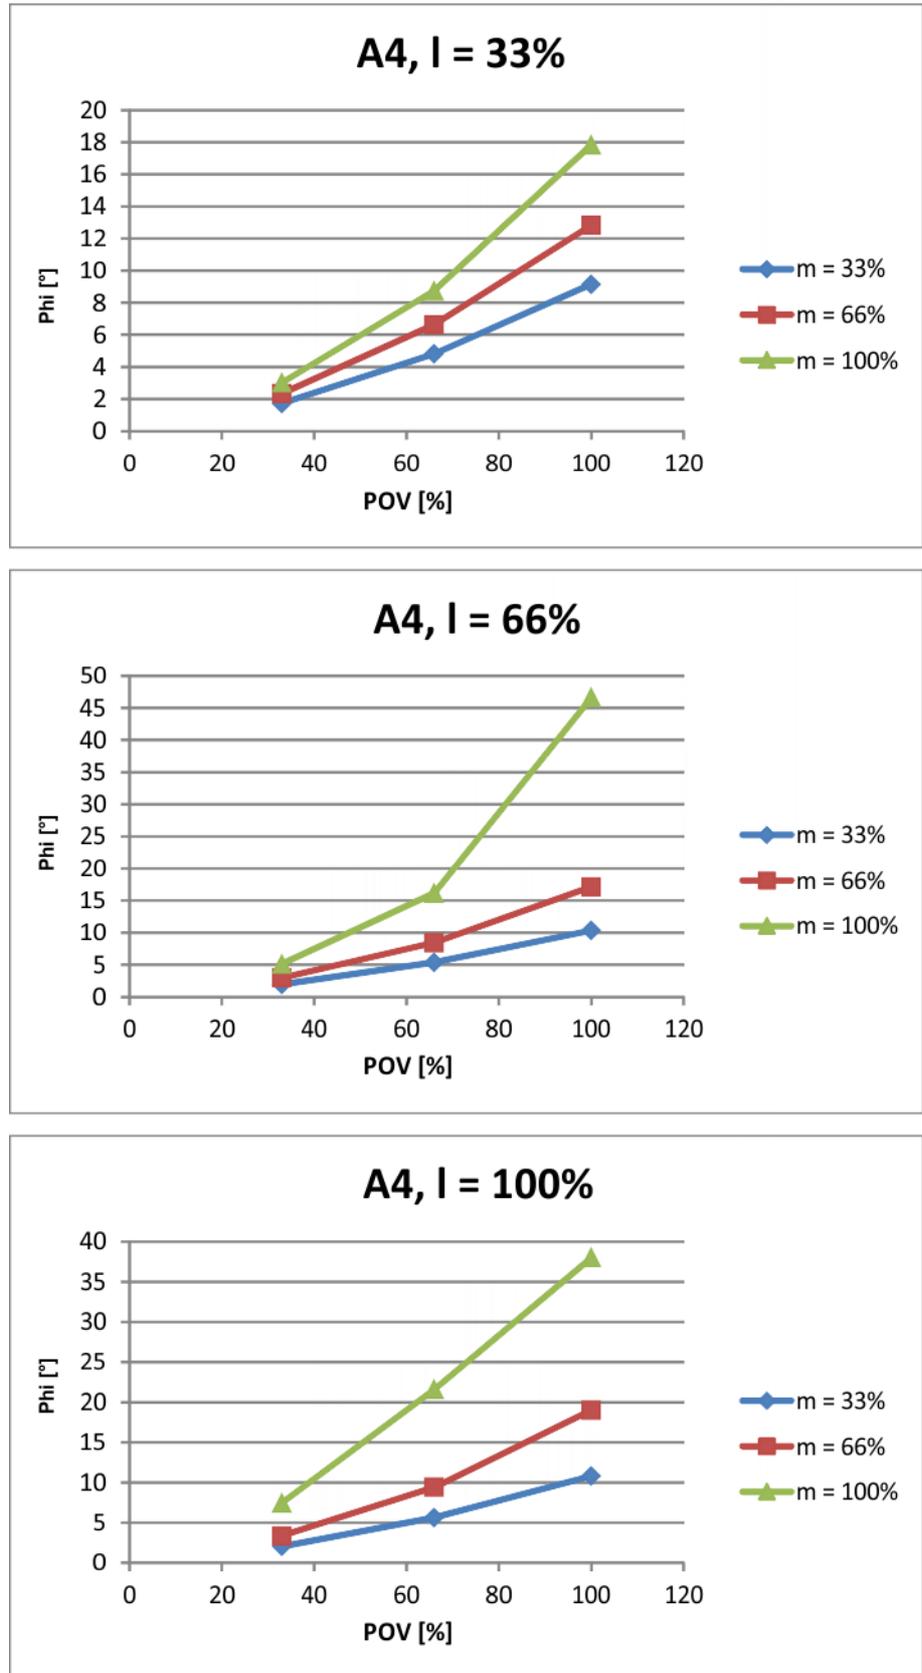


Fig. 4-25: Stopping distances for STOP 1, axis 4

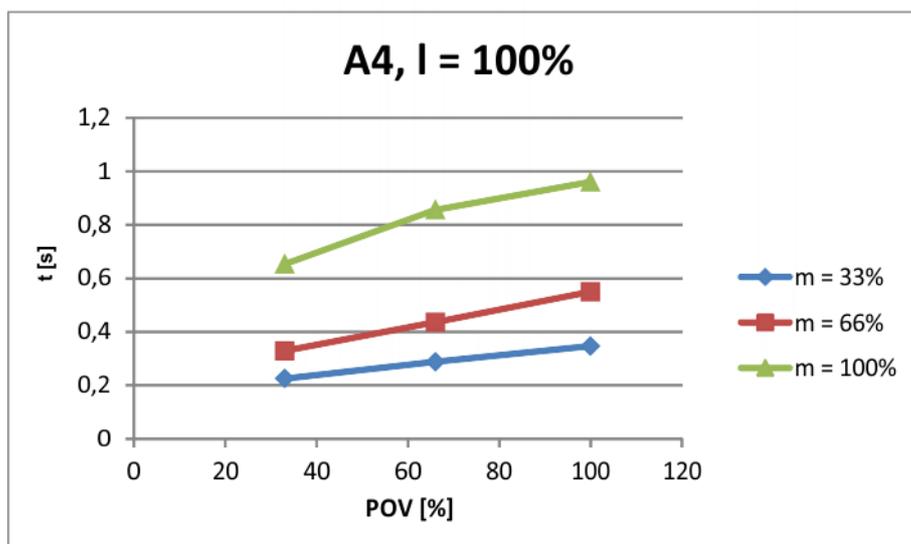
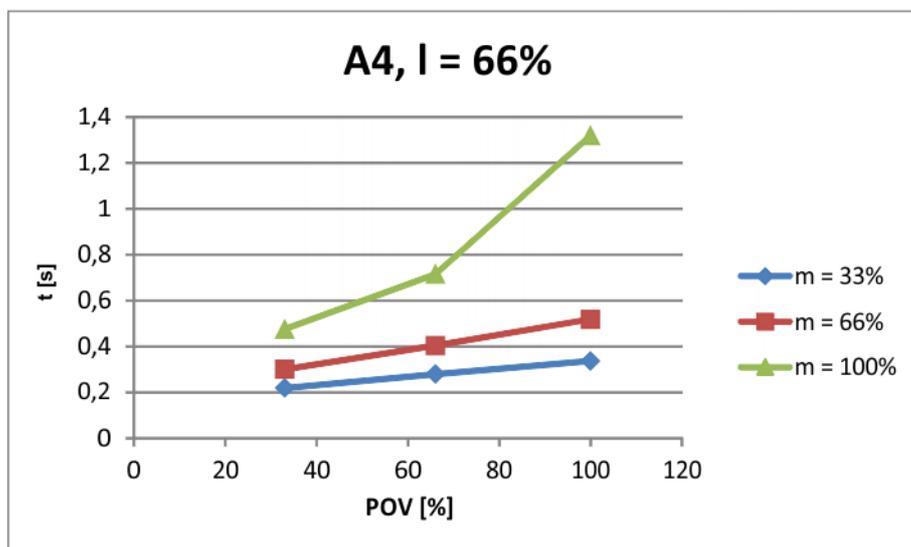
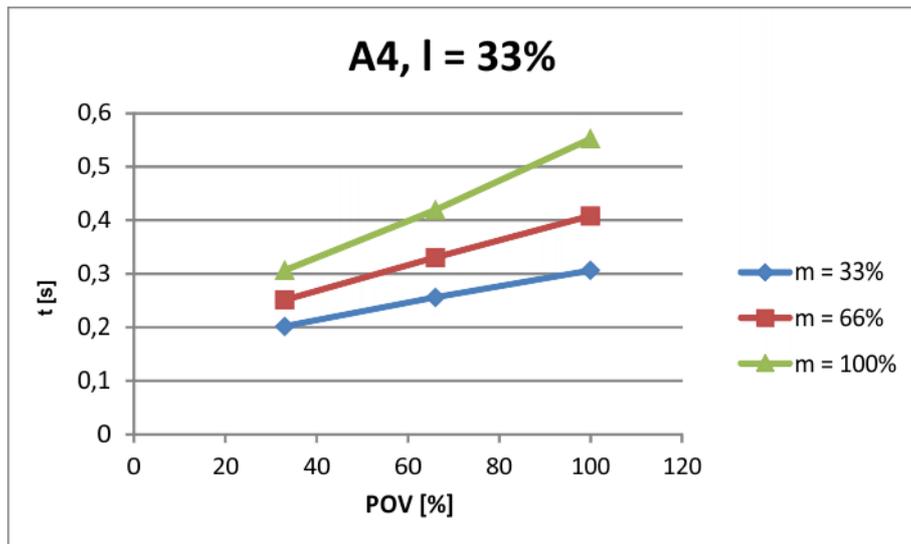


Fig. 4-26: Stopping times for STOP 1, axis 4

5 Safety

5.1 Legal framework

5.1.1 Liability

The device described in this document is either an industrial robot or a component thereof.

Components of the industrial robot:

- Manipulator
- Robot controller
- Hand-held control panel
- Connecting cables
- Software
- Options, accessories

The industrial robot is built using state-of-the-art technology and in accordance with the recognized safety rules. Nevertheless, misuse of the industrial robot may constitute a risk to life and limb or cause damage to the industrial robot and to other material property.

The industrial robot may only be used in perfect technical condition in accordance with its designated use and only by safety-conscious persons who are fully aware of the risks involved in its operation. Use of the industrial robot is subject to compliance with this document and with the declaration of incorporation supplied together with the industrial robot. Any functional disorders affecting safety must be rectified immediately.

Safety information

Safety information cannot be held against KUKA Laboratories GmbH. Even if all safety instructions are followed, this is not a guarantee that the industrial robot will not cause personal injuries or material damage.

No modifications may be carried out to the industrial robot without the authorization of KUKA Laboratories GmbH. Additional components (tools, software, etc.), not supplied by KUKA Laboratories GmbH, may be integrated into the industrial robot. The user is liable for any damage these components may cause to the industrial robot or to other material property.

In addition to the Safety chapter, this document contains further safety instructions. These must also be observed.

5.1.2 Intended use of the industrial robot

The industrial robot is intended exclusively for the use designated in the "Purpose" chapter of the operating instructions or assembly instructions.

Any use or application deviating from the intended use is deemed to be misuse and is not allowed. The manufacturer is not liable for any damage resulting from such misuse. The risk lies entirely with the user.

Operation of the industrial robot in accordance with its intended use also requires compliance with the operating and assembly instructions for the individual components, with particular reference to the maintenance specifications.

The user is responsible for the performance of a risk analysis. This indicates the additional safety equipment that is required, the installation of which is also the responsibility of the user.

Misuse

Any use or application deviating from the intended use is deemed to be misuse and is not allowed. This includes e.g.:

- Transportation of persons and animals
- Use as a climbing aid
- Operation outside the specified operating parameters
- Use in potentially explosive environments
- Operation without the required additional safety equipment
- Outdoor operation
- Underground operation

5.1.3 EC declaration of conformity and declaration of incorporation

The industrial robot constitutes partly completed machinery as defined by the EC Machinery Directive. The industrial robot may only be put into operation if the following preconditions are met:

- The industrial robot is integrated into a complete system.
Or: The industrial robot, together with other machinery, constitutes a complete system.
Or: All safety functions and safeguards required for operation in the complete machine as defined by the EC Machinery Directive have been added to the industrial robot.
- The complete system complies with the EC Machinery Directive. This has been confirmed by means of an assessment of conformity.

Declaration of conformity

The system integrator must issue a declaration of conformity for the complete system in accordance with the Machinery Directive. The declaration of conformity forms the basis for the CE mark for the system. The industrial robot must always be operated in accordance with the applicable national laws, regulations and standards.

The robot controller is CE certified under the EMC Directive and the Low Voltage Directive.

Declaration of incorporation

The industrial robot as partly completed machinery is supplied with a declaration of incorporation in accordance with Annex II B of the EC Machinery Directive 2006/42/EC. The assembly instructions and a list of essential requirements complied with in accordance with Annex I are integral parts of this declaration of incorporation.

The declaration of incorporation declares that the start-up of the partly completed machinery is not allowed until the partly completed machinery has been incorporated into machinery, or has been assembled with other parts to form machinery, and this machinery complies with the terms of the EC Machinery Directive, and the EC declaration of conformity is present in accordance with Annex II A.

5.2 Safety functions

Safety functions are distinguished according to the safety requirements that they fulfill:

- Safety-oriented functions for the protection of personnel
The safety-oriented functions of the industrial robot meet the following safety requirements:
 - **Category 3** and **Performance Level d** in accordance with EN ISO 13849-1:2008
 - **SIL 2** according to EN 62061

The requirements are only met on the following condition, however:

- The EMERGENCY STOP device is pressed and tested for correct functioning during start-up and at least once every 12 months.
- Non-safety-oriented functions for the protection of machines
The non-safety-oriented functions of the industrial robot do not meet specific safety requirements:

 **DANGER** In the absence of the required operational safety functions and safeguards, the industrial robot can cause personal injury or material damage. If the required safety functions or safeguards are dismantled or deactivated, the industrial robot may not be operated.

 During system planning, the safety functions of the overall system must also be planned and designed. The industrial robot must be integrated into this safety system of the overall system.

5.2.1 Terms used

Term	Description
Axis range	Range of each axis, in degrees or millimeters, within which it may move. The axis range must be defined for each axis.
Stopping distance	Stopping distance = reaction distance + braking distance The stopping distance is part of the danger zone.
Workspace	The manipulator is allowed to move within its workspace. The workspace is derived from the individual axis ranges.
Automatic (AUT)	Operating mode for program execution. The manipulator moves at the programmed velocity.
Operator (User)	The user of the industrial robot can be the management, employer or delegated person responsible for use of the industrial robot.
Danger zone	The danger zone consists of the workspace and the stopping distances.
Service life	The service life of a safety-relevant component begins at the time of delivery of the component to the customer. The service life is not affected by whether the component is used in a robot controller or elsewhere or not, as safety-relevant components are also subject to aging during storage.
CRR	Controlled Robot Retraction CRR is an operating mode that is available if a collision has been detected, or if the robot has violated a safely monitored space, a safely monitored Cartesian velocity limit or a safely monitored force or torque limit and is stopped by the safety controller. In CRR mode, the robot can be jogged and moved back to a position in which the monitoring function that triggered the stop is no longer violated.
KUKA smartPAD	The smartPAD is the hand-held control panel for the robot cell (station). The smartPAD has all the operator control and display functions required for operation.
Manipulator	The robot arm and the associated electrical installations
Safety zone	The manipulator is not allowed to move within the safety zone. The safety zone is the area outside the danger zone.

Term	Description
Safety stop	<p>The safety stop is triggered by the safety controller, interrupts the work procedure and causes all robot motions to come to a standstill. The program data are retained in the case of a safety stop and the program can be resumed from the point of interruption.</p> <p>The safety stop can be executed as a Stop category 0, Stop category 1 or Stop category 1 (path-maintaining).</p> <p>Note: In this document, a safety stop of Stop category 0 is referred to as safety stop 0, a safety stop of Stop category 1 as safety stop 1 and a safety stop of Stop category 1 (path-maintaining) as safety stop 1 (path-maintaining).</p>
Stop category 0	The drives are deactivated immediately and the brakes are applied.
Stop category 1	<p>The manipulator is braked and does not stay on the programmed path. The manipulator is brought to a standstill with the drives. As soon as an axis is at a standstill, the drive is switched off and the brake is applied.</p> <p>The internal electronic drive system of the robot performs safety-oriented monitoring of the braking process. Stop category 0 is executed in the event of a fault.</p>
Stop category 1 (path-maintaining)	<p>The manipulator is braked and stays on the programmed path. At standstill, the drives are deactivated and the brakes are applied.</p> <p>If Stop category 1 (path-maintaining) is triggered by the safety controller, the safety controller monitors the braking process. The brakes are applied and the drives are switched off after 1 s at the latest. Stop category 0 is executed in the event of a fault.</p>
System integrator (plant integrator)	System integrators are people who safely integrate the industrial robot into a complete system and commission it.
T1	Test mode, Manual Reduced Velocity (≤ 250 mm/s)
T2	Test mode, Manual High Velocity (> 250 mm/s permissible)

5.2.2 Personnel

The following persons or groups of persons are defined for the industrial robot:

- User
- Personnel



All persons working with the industrial robot must have read and understood the industrial robot documentation, including the safety chapter.

User

The user must observe the labor laws and regulations. This includes e.g.:

- The user must comply with his monitoring obligations.
- The user must carry out instructions at defined intervals.

Personnel

Personnel must be instructed, before any work is commenced, in the type of work involved and what exactly it entails as well as any hazards which may exist. Instruction must be carried out regularly. Instruction is also required after particular incidents or technical modifications.

Personnel includes:

- System integrator
- Operators, subdivided into:
 - Start-up, maintenance and service personnel
 - Operator
 - Cleaning personnel



Installation, exchange, adjustment, operation, maintenance and repair must be performed only as specified in the operating or assembly instructions for the relevant component of the industrial robot and only by personnel specially trained for this purpose.

System integrator The industrial robot is safely integrated into a complete system by the system integrator.

The system integrator is responsible for the following tasks:

- Installing the industrial robot
- Connecting the industrial robot
- Performing risk assessment
- Implementing the required safety functions and safeguards
- Issuing the declaration of conformity
- Attaching the CE mark
- Creating the operating instructions for the complete system

Operator

The operator must meet the following preconditions:

- The operator must be trained for the work to be carried out.
- Work on the industrial robot must only be carried out by qualified personnel. These are people who, due to their specialist training, knowledge and experience, and their familiarization with the relevant standards, are able to assess the work to be carried out and detect any potential hazards.



Work on the electrical and mechanical equipment of the manipulator may only be carried out by KUKA Laboratories GmbH.

5.2.3 Workspace, safety zone and danger zone

Working zones are to be restricted to the necessary minimum size in order to prevent danger to persons or the risk of material damage. Safe axis range limitations required for personnel protection are configurable.



Further information about configuring safe axis range limitations is contained in the "Safety configuration" chapter of the operating and programming instructions.

The danger zone consists of the workspace and the stopping distances of the manipulator. In the event of a stop, the manipulator is braked and comes to a stop within the danger zone. The safety zone is the area outside the danger zone.

The danger zone must be protected by means of physical safeguards, e.g. by light barriers, light curtains or safety fences. If there are no physical safeguards present, the requirements for collaborative operation in accordance with EN ISO 10218 must be met. There must be no shearing or crushing hazards at the loading and transfer areas.

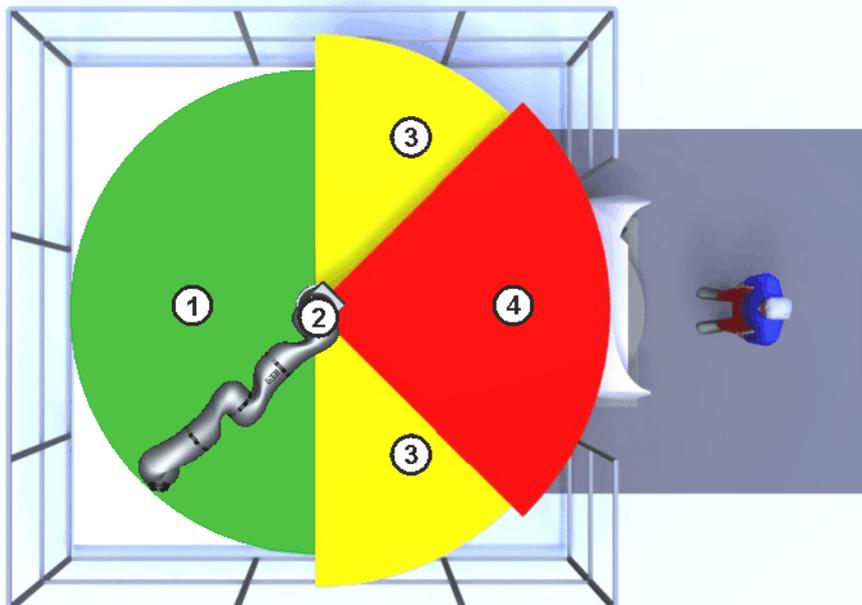


Fig. 5-1: Example: axis range A1

- | | | | |
|---|-------------|---|-------------------|
| 1 | Workspace | 3 | Stopping distance |
| 2 | Manipulator | 4 | Safety zone |

5.2.4 Safety-oriented functions

The following safety-oriented functions are present and permanently defined in the industrial robot:

- EMERGENCY STOP device
- Enabling device
- Locking of the operating mode (by means of a keyswitch)

The following safety-oriented functions are preconfigured and can be integrated into the system via the safety interface of the robot controller:

- Operator safety (= connection for the guard interlock)
- External EMERGENCY STOP device
- External safety stop 1 (path-maintaining)

Other safety-oriented functions that are not present by default may be configured, e.g.:

- External enabling device
- External safe operational stop
- Axis-specific workspace monitoring
- Cartesian workspace monitoring
- Cartesian protected space monitoring
- Velocity monitoring
- Standstill monitoring
- Axis torque monitoring
- Collision detection



Further information about configuring the safety functions is contained in the "Safety configuration" chapter of the operating and programming instructions.

The default configuration of the preconfigured safety functions is described in the following sections on safety.

5.2.4.1 EMERGENCY STOP device

The EMERGENCY STOP device for the industrial robot is the EMERGENCY STOP device on the smartPAD. The device must be pressed in the event of a hazardous situation or emergency.

Reaction of the industrial robot if the EMERGENCY STOP device is pressed:

- The manipulator stops with a safety stop 1 (path-maintaining).

Before operation can be resumed, the EMERGENCY STOP device must be turned to release it.

 **WARNING** Tools and other equipment connected to the manipulator must be integrated into the EMERGENCY STOP circuit on the system side if they could constitute a potential hazard. Failure to observe this precaution may result in death, severe injuries or considerable damage to property.

If a holder is used for the smartPAD and conceals the EMERGENCY STOP device on the smartPAD, an external EMERGENCY STOP device must be installed that is accessible at all times.

(>>> 5.2.4.4 "External EMERGENCY STOP device" Page 50)

5.2.4.2 Enabling device

The enabling devices of the industrial robot are the enabling switches on the smartPAD.

There are 3 enabling switches installed on the smartPAD. The enabling switches have 3 positions:

- Not pressed
- Center position
- Fully pressed (panic position)

In the test modes and in CRR, the manipulator can only be moved if one of the enabling switches is held in the central position.

- Releasing the enabling switch triggers a safety stop 1 (path-maintaining).
- Pressing the enabling switch down fully (panic position) triggers a safety stop 1.
- It is possible to hold 2 enabling switches in the center position simultaneously for several seconds. This makes it possible to adjust grip from one enabling switch to another one. If 2 enabling switches are held simultaneously in the center position for longer than 15 seconds, this triggers a safety stop 1.

If an enabling switch malfunctions (e.g. jams in the central position), the industrial robot can be stopped using the following methods:

- Press the enabling switch down fully.
- Actuate the EMERGENCY STOP device.
- Release the Start key.

 **WARNING** The enabling switches must not be held down by adhesive tape or other means or tampered with in any other way. Death, injuries or damage to property may result.

5.2.4.3 Operator safety

The operator safety signal is used for interlocking physical safeguards, e.g. safety gates. In the default configuration, automatic operation is not possible without this signal. Alternatively, the requirements for collaborative operation in accordance with EN ISO 10218 must be met.

Reaction of the industrial robot in the event of a loss of signal during automatic operation, e.g. safety gate is opened (default configuration):

- The manipulator stops with a safety stop 1 (path-maintaining).

By default, operator safety is not active in the modes T1 (Manual Reduced Velocity) and CRR, i.e. the signal is not evaluated. Operator safety is active in mode T2 (Manual High Velocity).



WARNING Following a loss of signal, automatic operation must not be resumed merely by closing the safeguard; the signal for operator safety must first be set by an additional device, e.g. by an acknowledge button. It is the responsibility of the system integrator to ensure this. This is to prevent automatic operation from being resumed inadvertently while there are still persons in the danger zone, e.g. due to the safety gate closing accidentally.

- This additional device must be designed in such a way that an actual check of the danger zone can be carried out first. Devices that do not allow this (e.g. because they are automatically triggered by closure of the safeguard) are not permissible.
- Failure to observe this may result in death to persons, severe injuries or considerable damage to property.

5.2.4.4 External EMERGENCY STOP device

There must be EMERGENCY STOP devices available at every operator station that can initiate a robot motion or other potentially hazardous situation. The system integrator is responsible for ensuring this.

Reaction of the industrial robot if the external EMERGENCY STOP device is pressed (default configuration):

- The manipulator stops with a safety stop 1 (path-maintaining).

Multiple external EMERGENCY STOP devices can be connected via the safety interface of the robot controller. External EMERGENCY STOP devices are not included in the scope of supply of the industrial robot.

5.2.4.5 External safety stop 1 (path-maintaining)

The external safety stop 1 (path-maintaining) can be triggered via an input on the safety interface (default configuration). The state is maintained as long as the external signal is FALSE. If the external signal is TRUE, the manipulator can be moved again. No acknowledgement is required.

5.2.4.6 External enabling device

External enabling devices are required if it is necessary for more than one person to be in the danger zone of the industrial robot.

Multiple external enabling devices can be connected via the safety interface of the robot controller. External enabling devices are not included in the scope of supply of the industrial robot.

5.2.4.7 External safe operational stop

The safe operational stop is a standstill monitoring function. It does not stop the robot motion, but monitors whether the robot axes are stationary.

The safe operational stop can be triggered via an input on the safety interface. The state is maintained as long as the external signal is FALSE. If the external signal is TRUE, the manipulator can be moved again. No acknowledgement is required.

5.2.5 Triggers for safety-oriented stop reactions

Stop reactions are triggered in response to operator actions or as a reaction to monitoring functions and errors. The following tables show the different stop reactions according to the operating mode that has been set.

Overview

In KUKA Sunrise a distinction is made between the following triggers:

- Permanently defined triggers

Permanently defined triggers for stop reactions and the associated stop category are preset by the system and cannot be changed. However, it is possible for the implemented stop reaction to be stepped up in the user-specific safety configuration.
- User-specific triggers

In addition to the permanently defined triggers, the user can also configure other triggers for stop reactions including the associated stop category.



Further information about configuring the safety functions is contained in the "Safety configuration" chapter of the operating and programming instructions.

Permanently defined triggers

The following triggers for stop reactions are permanently defined:

Trigger	T1, T2, CRR	AUT
Operating mode changed during operation	Safety stop 1 (path-maintaining)	
Enabling switch released	Safety stop 1 (path-maintaining)	-
Enabling switch pressed fully down (panic position)	Safety stop 1	-
Local E-STOP pressed	Safety stop 1 (path-maintaining)	
Error in safety controller	Safety stop 1	

User-specific triggers

The robot controller is shipped with a safety configuration that is active on initial start-up. This contains the following user-specific stop reaction triggers preconfigured by KUKA (in addition to the permanently defined triggers).

Trigger	T1, CRR	T2, AUT
Safety gate opened (operator safety)	-	Safety stop 1 (path-maintaining)

When creating a new Sunrise project, the system automatically generates a project-specific safety configuration. This contains the following user-specific stop reaction triggers preconfigured by KUKA (in addition to the permanently defined triggers).

i When the Sunrise project is transferred to the robot controller, the factory-set safety configuration is overwritten by the project-specific safety configuration. This makes it necessary for the safety configuration to be activated.
 Further information about activating the safety configuration is contained in the “Safety configuration” chapter of the operating and programming instructions.

Trigger	T1, CRR	T2, AUT
Safety gate opened (operator safety)	-	Safety stop 1 (path-maintaining)
External E-STOP pressed	Safety stop 1 (path-maintaining)	
External safety stop	Safety stop 1 (path-maintaining)	

5.2.6 Non-safety-oriented functions

5.2.6.1 Mode selection

The industrial robot can be operated in the following modes:

- Manual Reduced Velocity (T1)
- Manual High Velocity (T2)
- Automatic (AUT)
- Controlled robot retraction (CRR)

Operating mode	Use	Velocities
T1	Programming, teaching and testing of programs.	<ul style="list-style-type: none"> ■ Program verification: Reduced programmed velocity, maximum 250 mm/s ■ Jog mode: Jog velocity, maximum 250 mm/s
T2	Testing of programs Only possible with safety gate closed	<ul style="list-style-type: none"> ■ Program verification: Programmed velocity ■ Jog mode: not possible
AUT	Automatic execution of programs For industrial robots with and without higher-level controllers	<ul style="list-style-type: none"> ■ Program mode: Programmed velocity ■ Jog mode: not possible
CRR	Motion taking the industrial robot out of a violated space and retraction following collisions CRR is an operating mode that is available if a collision has been detected, or if the robot has violated a safely monitored space, a safely monitored Cartesian velocity limit or a safely monitored force or torque limit and is stopped by the safety controller.	<ul style="list-style-type: none"> ■ Program mode: Reduced programmed velocity, maximum 250 mm/s ■ Jog mode: Jog velocity, maximum 250 mm/s

5.2.6.2 Software limit switches

The axis ranges of all manipulator axes are limited by means of non-safety-oriented software limit switches. These software limit switches only serve as

machine protection and are preset in such a way that the manipulator is stopped under servo control if the axis limit is exceeded, thereby preventing damage to the mechanical equipment.

5.3 Additional protective equipment

5.3.1 Jog mode

In the operating modes T1 (Manual Reduced Velocity), T2 (Manual High Velocity) and CRR, the robot controller can only execute programs in jog mode. This means that it is necessary to hold down an enabling switch and the Start key in order to execute a program.

- Releasing the enabling switch on the smartPAD triggers a safety stop. (>>> 5.2.5 "Triggers for safety-oriented stop reactions" Page 51)
- Pressing the enabling switch on the smartPAD fully down triggers a safety stop 1.
- Releasing the Start key triggers a stop of Stop category 1 (path-maintaining).

5.3.2 Labeling on the industrial robot

All plates, labels, symbols and marks constitute safety-relevant parts of the industrial robot. They must not be modified or removed.

Labeling on the industrial robot consists of:

- Identification plates
- Warning signs
- Safety symbols
- Designation labels
- Cable markings
- Rating plates



Further information is contained in the technical data of the operating instructions or assembly instructions of the components of the industrial robot.

5.3.3 External safeguards

The access of persons to the danger zone of the industrial robot must be prevented by means of safeguards. Alternatively, the requirements for collaborative operation in accordance with EN ISO 10218 must be met. It is the responsibility of the system integrator to ensure this.

Physical safeguards must meet the following requirements:

- They meet the requirements of EN 953.
- They prevent access of persons to the danger zone and cannot be easily circumvented.
- They are sufficiently fastened and can withstand all forces that are likely to occur in the course of operation, whether from inside or outside the enclosure.
- They do not, themselves, represent a hazard or potential hazard.
- The prescribed minimum clearance from the danger zone is maintained.

Safety gates (maintenance gates) must meet the following requirements:

- They are reduced to an absolute minimum.
- The interlocks (e.g. safety gate switches) are linked to the configured operator safety inputs of the robot controller.
- Switching devices, switches and the type of switching conform to the requirements of Performance Level d and category 3 according to EN ISO 13849-1.
- Depending on the risk situation: the safety gate is additionally safeguarded by means of a locking mechanism that only allows the gate to be opened if the manipulator is safely at a standstill.
- The device for setting the signal for operator safety, e.g. the button for acknowledging the safety gate, is located outside the space limited by the safeguards.

 Further information is contained in the corresponding standards and regulations. These also include EN 953.

Other safety equipment

Other safety equipment must be integrated into the system in accordance with the corresponding standards and regulations.

5.4 Safety measures

5.4.1 General safety measures

The industrial robot may only be used in perfect technical condition in accordance with its intended use and only by safety-conscious persons. Operator errors can result in personal injury and damage to property.

It is important to be prepared for possible movements of the industrial robot even after the robot controller has been switched off and locked out. Incorrect installation (e.g. overload) or mechanical defects (e.g. brake defect) can cause the manipulator to sag. If work is to be carried out on a switched-off industrial robot, the manipulator must first be moved into a position in which it is unable to move on its own, whether the payload is mounted or not. If this is not possible, the manipulator must be secured by appropriate means.

 **DANGER** In the absence of operational safety functions and safeguards, the industrial robot can cause personal injury or material damage. If safety functions or safeguards are dismantled or deactivated, the industrial robot may not be operated.

 **WARNING** Standing underneath the robot arm can cause death or serious injuries. Especially if the industrial robot is moving objects that can become detached (e.g. from a gripper). For this reason, standing underneath the robot arm is prohibited!

smartPAD

The user must ensure that the industrial robot is only operated with the smartPAD by authorized persons.

Modifications

After modifications to the industrial robot, checks must be carried out to ensure the required safety level. The valid national or regional work safety regulations must be observed for this check. The correct functioning of all safety functions must also be tested.

New or modified programs must always be tested first in Manual Reduced Velocity mode (T1).

After modifications to the industrial robot, existing programs must always be tested first in Manual Reduced Velocity mode (T1). This applies to all components of the industrial robot and includes modifications to the software and configuration settings.

The robot may not be connected and disconnected when the robot controller is running.

Faults

The following tasks must be carried out in the case of faults in the industrial robot:

- Switch off the robot controller and secure it (e.g. with a padlock) to prevent unauthorized persons from switching it on again.
- Indicate the fault by means of a label with a corresponding warning (tag-out).
- Keep a record of the faults.
- Eliminate the fault and carry out a function test.

5.4.2 Transportation

Manipulator

The prescribed transport position of the manipulator must be observed. Transportation must be carried out in accordance with the operating instructions or assembly instructions of the robot.

Avoid vibrations and impacts during transportation in order to prevent damage to the manipulator.

Robot controller

The prescribed transport position of the robot controller must be observed. Transportation must be carried out in accordance with the operating instructions or assembly instructions of the robot controller.

Avoid vibrations and impacts during transportation in order to prevent damage to the robot controller.

5.4.3 Start-up and recommissioning

Before starting up systems and devices for the first time, a check must be carried out to ensure that the systems and devices are complete and operational, that they can be operated safely and that any damage is detected.

The valid national or regional work safety regulations must be observed for this check. The correct functioning of all safety functions must also be tested.



The password to activate the safety configuration must be changed before start-up. This password may only be communicated to trained safety maintenance technicians who are authorized to activate the safety configuration.



The robot controller is preconfigured for the specific industrial robot. If cables are interchanged, the manipulator may receive incorrect data and can thus cause personal injury or material damage. If a system consists of more than one manipulator, always connect the connecting cables to the manipulators and their corresponding robot controllers.



If additional components (e.g. cables), which are not part of the scope of supply of KUKA Laboratories GmbH, are integrated into the industrial robot, the user is responsible for ensuring that these components do not adversely affect or disable safety functions.

NOTICE

If the internal cabinet temperature of the robot controller differs greatly from the ambient temperature, condensation can form, which may cause damage to the electrical components. Do not put the robot controller into operation until the internal temperature of the cabinet has adjusted to the ambient temperature.

Function test

The following tests must be carried out before start-up and recommissioning:

General test:

It must be ensured that:

- The industrial robot is correctly installed and fastened in accordance with the specifications in the documentation.
- There are no foreign bodies or loose parts on the industrial robot.
- All required safety equipment is correctly installed and operational.
- The power supply ratings of the industrial robot correspond to the local supply voltage and mains type.
- The ground conductor and the equipotential bonding cable are sufficiently rated and correctly connected.
- The connecting cables are correctly connected and the connectors are locked.

Test of the safety functions:

A function test must be carried out for all the safety-oriented functions to ensure that they are working correctly:



In the case of incomplete start-up of the system, additional substitute measures for minimizing risk must be taken and documented, e.g. installation of a safety fence, attachment of a warning sign, locking of the main switch, etc. Start-up is incomplete, for example, if not all safety functions have yet been implemented, or if a function test of the safety functions has not yet been carried out.

Test of the functional capability of the brakes:

The KUKA LBR iiwa (all variants) must undergo a brake test on a regular basis in order to check whether the brakes on all axes apply sufficient braking torque.

The brake test must be carried out during start-up and recommissioning of the industrial robot.

Irrespective of the period of operation and type of application, the brake test must be performed daily during operation.

5.4.4 Manual mode

Manual mode is the mode for setup work. Setup work is all the tasks that have to be carried out on the industrial robot to enable automatic operation. Setup work includes:

- Jog mode
- Teaching
- Program verification

The following must be taken into consideration in manual mode:

- New or modified programs must always be tested first in Manual Reduced Velocity mode (T1).
- The manipulator and its tooling must never touch or project beyond the safety fence.
- Workpieces, tooling and other objects must not become jammed as a result of the industrial robot motion, nor must they lead to short-circuits or be liable to fall off.
- All setup work must be carried out, where possible, from outside the safeguarded area.

If the setup work has to be carried out inside the safeguarded area, the following must be taken into consideration:

In Manual Reduced Velocity mode (T1):

- If it can be avoided, there must be no other persons inside the safeguarded area.
If it is necessary for there to be several persons inside the safeguarded area, the following must be observed:
 - Each person must have an enabling device.
 - All persons must have an unimpeded view of the industrial robot.
 - Eye-contact between all persons must be possible at all times.
- The operator must be so positioned that he can see into the danger area and get out of harm's way.

In Manual High Velocity mode (T2):

- This mode may only be used if the application requires a test at a velocity higher than Manual Reduced Velocity.
- Teaching is not permissible in this operating mode.
- Before commencing the test, the operator must ensure that the enabling devices are operational.
- There must be no-one present inside the safeguarded area. It is the responsibility of the operator to ensure this.

5.4.5 Automatic mode

Automatic mode is only permissible in compliance with the following safety measures:

- All safety equipment and safeguards are present and operational.
- There are no persons in the system. Alternatively, the requirements for collaborative operation in accordance with EN ISO 10218 have been met.
- The defined working procedures are adhered to.

If the manipulator comes to a standstill for no apparent reason, the danger zone must not be entered until an EMERGENCY STOP has been triggered.

5.4.6 Maintenance and repair

After maintenance and repair work, checks must be carried out to ensure the required safety level. The valid national or regional work safety regulations must be observed for this check. The correct functioning of all safety functions must also be tested.

The purpose of maintenance and repair work is to ensure that the system is kept operational or, in the event of a fault, to return the system to an operational state. Repair work includes troubleshooting in addition to the actual repair itself.

The following safety measures must be carried out when working on the industrial robot:

- Carry out work outside the danger zone. If work inside the danger zone is necessary, the user must define additional safety measures to ensure the safe protection of personnel.
- Switch off the industrial robot and secure it (e.g. with a padlock) to prevent it from being switched on again. If it is necessary to carry out work with the robot controller switched on, the user must define additional safety measures to ensure the safe protection of personnel.
- If it is necessary to carry out work with the robot controller switched on, this may only be done in operating mode T1.
- Label the system with a sign indicating that work is in progress. This sign must remain in place, even during temporary interruptions to the work.
- The EMERGENCY STOP systems must remain active. If safety functions or safeguards are deactivated during maintenance or repair work, they must be reactivated immediately after the work is completed.



DANGER Before work is commenced on live parts of the robot system, the main switch must be turned off and secured against being switched on again. The system must then be checked to ensure that it is deenergized. It is not sufficient, before commencing work on live parts, to execute an EMERGENCY STOP or a safety stop, or to switch off the drives, as this does not disconnect the robot system from the mains power supply. Parts remain energized. Death or severe injuries may result.

Faulty components must be replaced using new components with the same article numbers or equivalent components approved by KUKA Laboratories GmbH for this purpose.

Cleaning and preventive maintenance work is to be carried out in accordance with the operating instructions.

Robot controller

Even when the robot controller is switched off, parts connected to peripheral devices may still carry voltage. The external power sources must therefore be switched off if work is to be carried out on the robot controller.

The ESD regulations must be adhered to when working on components in the robot controller.

Voltages in excess of 60 V can be present in various components for several minutes after the robot controller has been switched off! To prevent life-threatening injuries, no work may be carried out on the industrial robot in this time.

Water and dust must be prevented from entering the robot controller.

5.4.7 Decommissioning, storage and disposal

The industrial robot must be decommissioned, stored and disposed of in accordance with the applicable national laws, regulations and standards.

5.4.8 Safety measures for “single point of control”

Overview

If certain components in the industrial robot are operated, safety measures must be taken to ensure complete implementation of the principle of “single point of control” (SPOC).

Components:

- Tools for configuration of bus systems with online functionality



The implementation of additional safety measures may be required. This must be clarified for each specific application; this is the responsibility of the user of the system.

Since only the system integrator knows the safe states of actuators in the periphery of the robot controller, it is his task to set these actuators to a safe state.

T1, T2, CRR

In modes T1, T2 and CRR, a robot motion can only be initiated if an enabling switch on the smartPAD is held down.

Tools for configuration of bus systems

If these components have an online functionality, they can be used with write access to modify programs, outputs or other parameters of the robot controller, without this being noticed by any persons located inside the system.

- KUKA Sunrise.Workbench
- WorkVisual from KUKA
- Tools from other manufacturers

Safety measures:

- In the test modes, programs, outputs or other parameters of the robot controller must not be modified using these components.

5.5 Applied norms and regulations

Name	Definition	Edition
2006/42/EC	Machinery Directive: Directive 2006/42/EC of the European Parliament and of the Council of 17 May 2006 on machinery, and amending Directive 95/16/EC (recast)	2006
2004/108/EC	EMC Directive: Directive 2004/108/EC of the European Parliament and of the Council of 15 December 2004 on the approximation of the laws of the Member States relating to electromagnetic compatibility and repealing Directive 89/336/EEC	2004
EN ISO 13850	Safety of machinery: Emergency stop - Principles for design	2008
EN ISO 13849-1	Safety of machinery: Safety-related parts of control systems - Part 1: General principles of design	2008
EN ISO 13849-2	Safety of machinery: Safety-related parts of control systems - Part 2: Validation	2012
EN ISO 12100	Safety of machinery: General principles of design, risk assessment and risk reduction	2010

EN ISO 10218-1	Industrial robot: Safety Note: Content equivalent to ANSI/RIA R.15.06-2012, Part 1	2011
EN 614-1	Safety of machinery: Ergonomic design principles - Part 1: Terms and general principles	2009
EN 61000-6-2	Electromagnetic compatibility (EMC): Part 6-2: Generic standards; Immunity for industrial environments	2005
EN 61000-6-4 + A1	Electromagnetic compatibility (EMC): Part 6-4: Generic standards; Emission standard for industrial environments	2011
EN 60204-1 + A1	Safety of machinery: Electrical equipment of machines - Part 1: General requirements	2009

6 Planning

6.1 Mounting variant

The following mounting variants are available for installing the robot:

- Machine frame mounting with centering (>>> 6.1.1 "Machine frame mounting with centering" Page 61)

6.1.1 Machine frame mounting with centering

The machine frame mounting assembly is used when the robot is fastened on a steel structure, a booster frame (pedestal) or a KUKA linear unit. This assembly is also used if the robot is installed on the ceiling. It must be ensured that the substructure is able to withstand safely the forces occurring during operation (foundation loads). The following diagram contains all the necessary information that must be observed when preparing the mounting surface.

The machine frame mounting assembly consists of:

- Locating pins
- Allen screws

Dimensioned drawing

The following illustrations provide all the necessary information on machine frame mounting, together with the required foundation data.

- LBR iiwa 7 R800**

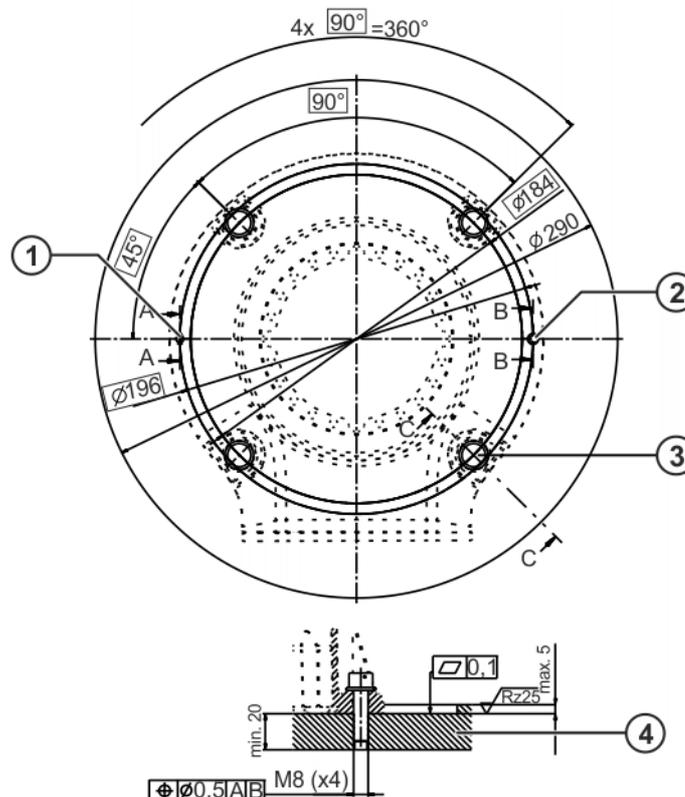


Fig. 6-1: Machine frame mounting, dimensioned drawing LBR iiwa 7 R800

- Flat-sided locating pin, 6x12
- Cylindrical locating pin, 6x12

- 3 M8x30-8.8 Allen screw (4x) with washer
- 4 Steel structure

■ LBR iiwa 14 R820

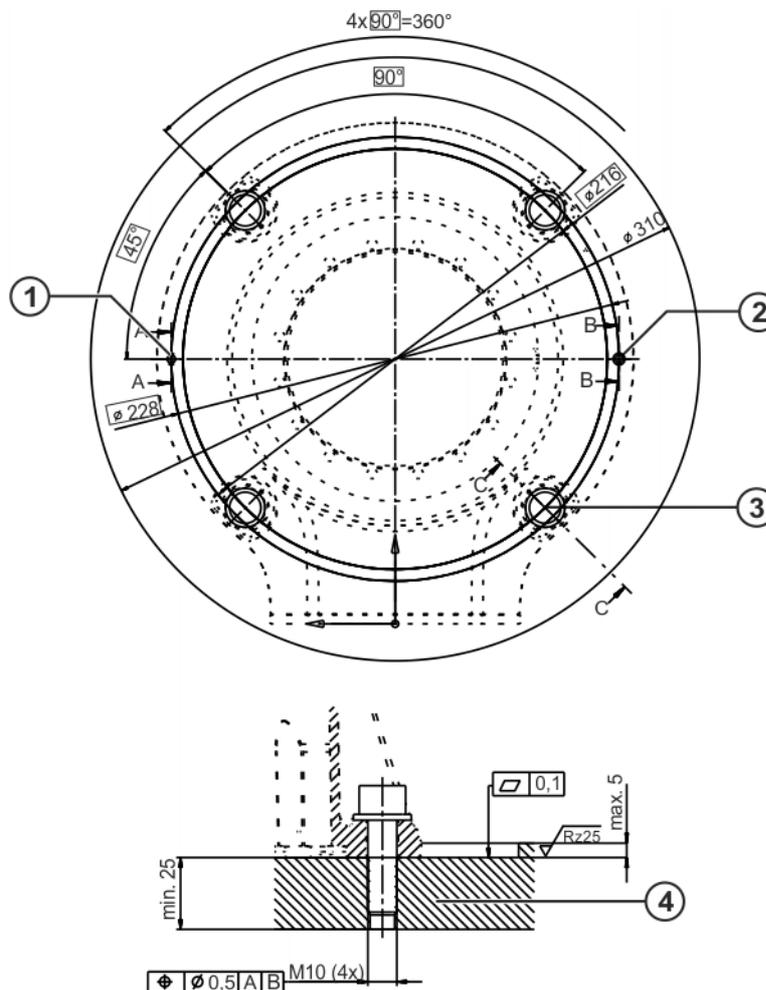


Fig. 6-2: Machine frame mounting, dimensioned drawing LBR iiwa 14 R820

- 1 Flat-sided locating pin, 6x12
- 2 Cylindrical locating pin, 6x12
- 3 M10x35-8.8 Allen screw (4x) with washer
- 4 Steel structure

6.2 Connecting cables and interfaces

Connecting cables

The connecting cables comprise all the cables for transferring energy and signals between the robot and the robot controller. They are connected on the robot side at interface A1. The set of connecting cables comprises:

- Data cable with power supply

Depending on the specification of the robot, various connecting cables are used. The standard cable length is 4 m. Cable lengths of 1 m, 3 m, 4 m, 7 m and 15 m are available as an option. The maximum length of the connecting cables must not exceed 15 m. If the robot is operated on a linear unit which has its own energy supply chain these cables must also be taken into account.

The following points must be observed when planning and routing the connecting cables:

- The bending radius for fixed routing must not be less than 45 mm for data cables.
- Protect cables against exposure to mechanical stress.
- Route the cables without mechanical stress – no tensile forces on the connectors
- Cables are only to be installed indoors.
- Observe permissible temperature range (fixed installation) of 263 K (-10 °C) to 343 K (+70 °C).
- Route the connecting cable in a metal duct; if necessary, additional measures must be taken to ensure electromagnetic compatibility (EMC).

7 Transportation

7.1 Transportation

It must be ensured that the robot is stable while it is being transported. The robot must remain in its transport position until it has been fastened in position. Before the robot is transported, the tooling must be dismantled and the connecting cables must be unplugged.

On delivery of the robot, the transport safeguards such as nails or screws must be removed before installation. If the robot is installed before transportation, it may be jammed tight by rust or glue on contact surfaces.

The following variants are available for transporting the robot:

- Transport packaging
(>>> 7.1.1 "Transportation with transport packaging" Page 65)
- Transport box (optional)
(>>> 7.1.2 "Transportation with transport box (optional)" Page 66)

WARNING Use of unsuitable handling equipment may result in damage to the robot or injury to persons. Only use authorized handling equipment with a sufficient load-bearing capacity. Only transport the robot in the manner specified here.

NOTICE The robot may only be transported in the transport position and in the transport container provided.

i For removal, the robot must be lifted between axes A2 and A3 and between A4 and A5. This applies to both transportation variants.

7.1.1 Transportation with transport packaging

Transport position

The robot must be in the transport position before it can be transported. The robot is in the transport position when the axes are in the following positions:

A1 (J1)	A2 (J2)	A3 (J4)	A4 (J5)	A5 (J6)	A6 (J7)	A7 (J8)
0°	25°	0°	90°	0°	0°	0°

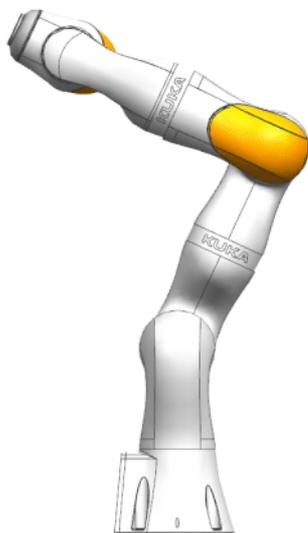


Fig. 7-1: Robot in transport position

Transport dimensions

Transport the robot in the transport packaging provided that has the following outer dimensions:

- Length: 1180 mm
- Width: 780 mm
- Height: 560 mm

The transport dimensions are identical for both variants.

7.1.2 Transportation with transport box (optional)

Transport position

The robot must be in the transport position before it can be transported (>>> Fig. 7-2). The robot is in the transport position when the axes are in the following positions:

A1 (J1)	A2 (J2)	A3 (J4)	A4 (J5)	A5 (J6)	A6 (J7)	A7 (J8)
0	0	0	0	0	0	0°

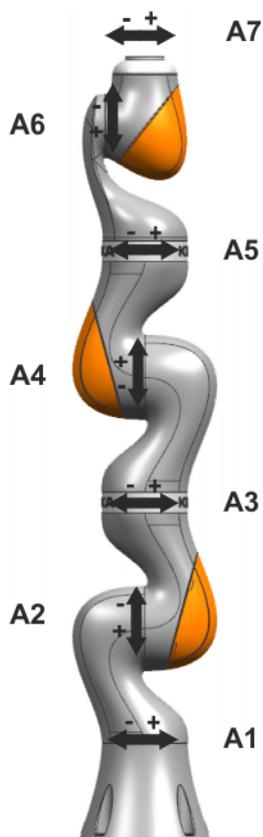


Fig. 7-2: Robot axes

Transport dimensions

Transport the robot in the transport box provided that has the following outer dimensions:

- Length: 1450 mm
- Width: 480 mm
- Height: 340 mm

The transport dimensions are identical for both variants.

8 KUKA Service

8.1 Requesting support

Introduction	This documentation provides information on operation and operator control, and provides assistance with troubleshooting. For further assistance, please contact your local KUKA subsidiary.
Information	<p>The following information is required for processing a support request:</p> <ul style="list-style-type: none"> ■ Model and serial number of the manipulator ■ Model and serial number of the controller ■ Model and serial number of the linear unit (if present) ■ Model and serial number of the energy supply system (if present) ■ Version of the system software ■ Optional software or modifications ■ Diagnostic package KrcDiag: Additionally for KUKA Sunrise: Existing projects including applications For versions of KUKA System Software older than V8: Archive of the software (KrcDiag is not yet available here.) ■ Application used ■ External axes used ■ Description of the problem, duration and frequency of the fault

8.2 KUKA Customer Support

Availability	KUKA Customer Support is available in many countries. Please do not hesitate to contact us if you have any questions.
Argentina	<p>Ruben Costantini S.A. (Agency) Luis Angel Huergo 13 20 Parque Industrial 2400 San Francisco (CBA) Argentina Tel. +54 3564 421033 Fax +54 3564 428877 ventas@costantini-sa.com</p>
Australia	<p>KUKA Robotics Australia Pty Ltd 45 Fennell Street Port Melbourne VIC 3207 Australia Tel. +61 3 9939 9656 info@kuka-robotics.com.au www.kuka-robotics.com.au</p>

Belgium	KUKA Automatisering + Robots N.V. Centrum Zuid 1031 3530 Houthalen Belgium Tel. +32 11 516160 Fax +32 11 526794 info@kuka.be www.kuka.be
Brazil	KUKA Roboter do Brasil Ltda. Travessa Claudio Armando, nº 171 Bloco 5 - Galpões 51/52 Bairro Assunção CEP 09861-7630 São Bernardo do Campo - SP Brazil Tel. +55 11 4942-8299 Fax +55 11 2201-7883 info@kuka-roboter.com.br www.kuka-roboter.com.br
Chile	Robotec S.A. (Agency) Santiago de Chile Chile Tel. +56 2 331-5951 Fax +56 2 331-5952 robotec@robotec.cl www.robotec.cl
China	KUKA Robotics China Co., Ltd. No. 889 Kungang Road Xiaokunshan Town Songjiang District 201614 Shanghai P. R. China Tel. +86 21 5707 2688 Fax +86 21 5707 2603 info@kuka-robotics.cn www.kuka-robotics.com
Germany	KUKA Roboter GmbH Zugspitzstr. 140 86165 Augsburg Germany Tel. +49 821 797-4000 Fax +49 821 797-1616 info@kuka-roboter.de www.kuka-roboter.de

France KUKA Automatismes + Robotique SAS
Techvallée
6, Avenue du Parc
91140 Villebon S/Yvette
France
Tel. +33 1 6931660-0
Fax +33 1 6931660-1
commercial@kuka.fr
www.kuka.fr

India KUKA Robotics India Pvt. Ltd.
Office Number-7, German Centre,
Level 12, Building No. - 9B
DLF Cyber City Phase III
122 002 Gurgaon
Haryana
India
Tel. +91 124 4635774
Fax +91 124 4635773
info@kuka.in
www.kuka.in

Italy KUKA Roboter Italia S.p.A.
Via Pavia 9/a - int.6
10098 Rivoli (TO)
Italy
Tel. +39 011 959-5013
Fax +39 011 959-5141
kuka@kuka.it
www.kuka.it

Japan KUKA Robotics Japan K.K.
YBP Technical Center
134 Godo-cho, Hodogaya-ku
Yokohama, Kanagawa
240 0005
Japan
Tel. +81 45 744 7691
Fax +81 45 744 7696
info@kuka.co.jp

Canada KUKA Robotics Canada Ltd.
6710 Maritz Drive - Unit 4
Mississauga
L5W 0A1
Ontario
Canada
Tel. +1 905 670-8600
Fax +1 905 670-8604
info@kukarobotics.com
www.kuka-robotics.com/canada

Korea	KUKA Robotics Korea Co. Ltd. RIT Center 306, Gyeonggi Technopark 1271-11 Sa 3-dong, Sangnok-gu Ansan City, Gyeonggi Do 426-901 Korea Tel. +82 31 501-1451 Fax +82 31 501-1461 info@kukakorea.com
Malaysia	KUKA Robot Automation (M) Sdn Bhd South East Asia Regional Office No. 7, Jalan TPP 6/6 Taman Perindustrian Puchong 47100 Puchong Selangor Malaysia Tel. +60 (03) 8063-1792 Fax +60 (03) 8060-7386 info@kuka.com.my
Mexico	KUKA de México S. de R.L. de C.V. Progreso #8 Col. Centro Industrial Puente de Vigas Tlalnepantla de Baz 54020 Estado de México Mexico Tel. +52 55 5203-8407 Fax +52 55 5203-8148 info@kuka.com.mx www.kuka-robotics.com/mexico
Norway	KUKA Sveiseanlegg + Roboter Sentrumsvegen 5 2867 Hov Norway Tel. +47 61 18 91 30 Fax +47 61 18 62 00 info@kuka.no
Austria	KUKA Roboter CEE GmbH Gruberstraße 2-4 4020 Linz Austria Tel. +43 7 32 78 47 52 Fax +43 7 32 79 38 80 office@kuka-roboter.at www.kuka.at

Poland KUKA Roboter Austria GmbH
Spółka z ograniczoną odpowiedzialnością
Oddział w Polsce
Ul. Porcelanowa 10
40-246 Katowice
Poland
Tel. +48 327 30 32 13 or -14
Fax +48 327 30 32 26
ServicePL@kuka-roboter.de

Portugal KUKA Sistemas de Automatización S.A.
Rua do Alto da Guerra n° 50
Armazém 04
2910 011 Setúbal
Portugal
Tel. +351 265 729780
Fax +351 265 729782
kuka@mail.telepac.pt

Russia KUKA Robotics RUS
Werbnaja ul. 8A
107143 Moskau
Russia
Tel. +7 495 781-31-20
Fax +7 495 781-31-19
info@kuka-robotics.ru
www.kuka-robotics.ru

Sweden KUKA Svetsanläggningar + Robotar AB
A. Odhners gata 15
421 30 Västra Frölunda
Sweden
Tel. +46 31 7266-200
Fax +46 31 7266-201
info@kuka.se

Switzerland KUKA Roboter Schweiz AG
Industriestr. 9
5432 Neuenhof
Switzerland
Tel. +41 44 74490-90
Fax +41 44 74490-91
info@kuka-roboter.ch
www.kuka-roboter.ch

Spain	KUKA Robots IBÉRICA, S.A. Pol. Industrial Torrent de la Pastera Carrer del Bages s/n 08800 Vilanova i la Geltrú (Barcelona) Spain Tel. +34 93 8142-353 Fax +34 93 8142-950 Comercial@kuka-e.com www.kuka-e.com
South Africa	Jendamark Automation LTD (Agency) 76a York Road North End 6000 Port Elizabeth South Africa Tel. +27 41 391 4700 Fax +27 41 373 3869 www.jendamark.co.za
Taiwan	KUKA Robot Automation Taiwan Co., Ltd. No. 249 Pujong Road Jungli City, Taoyuan County 320 Taiwan, R. O. C. Tel. +886 3 4331988 Fax +886 3 4331948 info@kuka.com.tw www.kuka.com.tw
Thailand	KUKA Robot Automation (M)SdnBhd Thailand Office c/o Maccall System Co. Ltd. 49/9-10 Soi Kingkaew 30 Kingkaew Road Tt. Rachatheva, A. Bangpli Samutprakarn 10540 Thailand Tel. +66 2 7502737 Fax +66 2 6612355 atika@ji-net.com www.kuka-roboter.de
Czech Republic	KUKA Roboter Austria GmbH Organisation Tschechien und Slowakei Sezemická 2757/2 193 00 Praha Horní Počernice Czech Republic Tel. +420 22 62 12 27 2 Fax +420 22 62 12 27 0 support@kuka.cz

Hungary KUKA Robotics Hungaria Kft.
Fő út 140
2335 Taksony
Hungary
Tel. +36 24 501609
Fax +36 24 477031
info@kuka-robotics.hu

USA KUKA Robotics Corporation
51870 Shelby Parkway
Shelby Township
48315-1787
Michigan
USA
Tel. +1 866 873-5852
Fax +1 866 329-5852
info@kukarobotics.com
www.kukarobotics.com

UK KUKA Automation + Robotics
Hereward Rise
Halesowen
B62 8AN
UK
Tel. +44 121 585-0800
Fax +44 121 585-0900
sales@kuka.co.uk

Index

Numbers

2004/108/EC 59

2006/42/EC 59

89/336/EEC 59

95/16/EC 59

A

Accessories 9, 43

Angle of rotation 23

ANSI/RIA R.15.06-2012 60

Applied norms and regulations 59

AUT 45

Automatic 45

Automatic mode 57

Axis data, LBR iiwa 14 R820 18

Axis data, LBR iiwa 7 R800 14

Axis range 45

B

Basic data, LBR iiwa 14 R820 17

Basic data, LBR iiwa 7 R800 13

Brake defect 54

Braking distance 45

C

CE mark 44

Cleaning work 58

Connecting cables 9, 43

Connecting cables and interfaces 62

CRR 45

D

Danger zone 45

Declaration of conformity 44

Declaration of incorporation 43, 44

Decommissioning 58

Disposal 58

Documentation, industrial robot 5

E

EC declaration of conformity 44

Electromagnetic compatibility (EMC) 60

EMC Directive 44, 59

EMERGENCY STOP device 48, 49, 50

EMERGENCY STOP, external 48, 50

EN 60204-1 + A1 60

EN 61000-6-2 60

EN 61000-6-4 + A1 60

EN 614-1 60

EN ISO 10218-1 60

EN ISO 12100 59

EN ISO 13849-1 59

EN ISO 13849-2 59

EN ISO 13850 59

Enabling device 48, 49

Enabling device, external 48, 50

Enabling switches 49

F

Faults 55

Foundation data, LBR iiwa 14 R820 21

Foundation data, LBR iiwa 7 R800 17

Function test 56

G

General information 22

General safety measures 54

H

Hand-held control panel 9, 43

Handling equipment 65

I

Industrial robot 43

Intended use 7, 43

Interlock, physical safeguards 50

Introduction 5

J

Jog mode 53

K

KCP 6

KCP, KUKA Control Panel 23

KUKA Customer Support 67

KUKA smartPAD 45, 54

KUKA Sunrise Cabinet 9

L

Labeling 53

LBR iiwa 5

Liability 43

Low Voltage Directive 44

M

Machine frame mounting with centering 61

Machinery Directive 44, 59

Maintenance 57

Manipulator 6, 9, 43, 45, 48

Manual mode 56

Mode selection 52

Mounting variant 61

N

Non-safety-oriented functions 52

O

Operator 45, 47

Operator safety 48, 50

Options 9, 43

Overload 54

Overview 10

Overview of the robot system 9

P

Panic position 49

Payloads, LBR iiwa 14 R820 19
 Payloads, LBR iiwa 7 R800 15
 Performance Level 44
 Personnel 46
 Planning 61
 Plant integrator 46
 Plates and labels 21
 Preventive maintenance work 58
 Product description 9
 Program override, motion velocity 23
 Protective equipment 53
 Purpose 7

R

Reaction distance 45
 Recommissioning 55
 Repair 57
 Robot controller 43

S

Safe operational stop, external 48, 51
 Safeguards, external 53
 Safety 43
 Safety functions 44
 Safety instructions 5
 Safety of machinery 59
 Safety stop 46
 Safety stop 0 46
 Safety stop 1 46
 Safety stop 1 (path-maintaining) 46
 Safety stop, external 48, 50
 Safety zone 45, 47, 48
 Safety-oriented functions 48
 Safety-oriented stop reactions 51
 Safety, legal framework 43
 Service life 45
 Service, KUKA Roboter 67
 Single point of control 58
 smartPAD 6, 45, 54
 Software 9, 43
 Software limit switches 52
 SPOC 58
 Start-up 55
 STOP 0 22
 STOP 1 23
 Stop category 0 46
 Stop category 1 46
 Stop category 1 (path-maintaining) 46
 Stop reactions, safety-oriented 51
 Stop signal 22
 Stopping distance 22, 45, 48
 Stopping distances 22
 Stopping distances for LBR iiwa 14 R820 33
 Stopping distances for LBR iiwa 7 R800 24
 Stopping distances for STOP 0, axis 1 to axis 4
 24, 33
 Stopping distances for STOP 1, axis 1 25, 34
 Stopping distances for STOP 1, axis 2 27, 36
 Stopping distances for STOP 1, axis 3 29, 38
 Stopping distances for STOP 1, axis 4 31, 40
 Stopping time 22

Stopping times 22
 Stopping times for LBR iiwa 14 R820 33
 Stopping times for LBR iiwa 7 R800 24
 Stopping times for STOP 0, axis 1 to axis 4 24,
 33
 Stopping times for STOP 1, axis 1 25, 34
 Stopping times for STOP 1, axis 2 27, 36
 Stopping times for STOP 1, axis 3 29, 38
 Stopping times for STOP 1, axis 4 31, 40
 Storage 58
 Supplementary load 16, 20
 Support request 67
 System integrator 44, 46, 47

T

T1 46
 T2 46
 Technical data 13
 Technical data, LBR iiwa 14 R820 17
 Technical data, LBR iiwa 7 R800 13
 Technical data, overview 13
 Terms used 5, 23
 Terms used, safety 45
 Training 7
 Transport dimensions 66
 Transport position 65, 66
 Transportation 55, 65

U

Use, contrary to intended use 43
 Use, improper 43
 User 45, 46
 Users 7

W

Warnings 5
 Workspace 45, 47, 48

